

Installer manual

NIBE PV Solar cell package

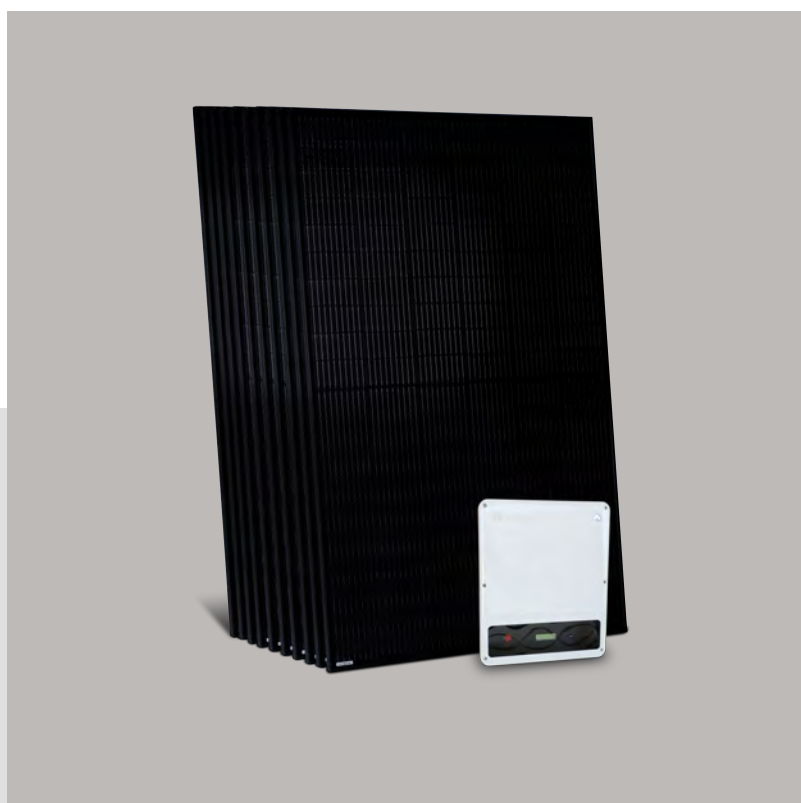


Table of Contents

1	<i>Important information</i> _____	4
	Safety information _____	4
	General _____	4
	Start-up protocol for solar panel system _____	5
2	<i>Delivery and handling</i> _____	7
	Delivery _____	7
	Handling _____	7
	Supplied components _____	8
3	<i>Installation</i> _____	9
	General _____	9
	Installation and positioning _____	10
	Functions _____	11
4	<i>Mounting</i> _____	12
	Installing solar panels in several groups _____	12
5	<i>Electrical connection</i> _____	19
	Outline diagram _____	19
6	<i>Maintenance</i> _____	24
	Service _____	24
7	<i>Technical specifications</i> _____	25
8	<i>Accessories</i> _____	26
	Solar package NIBE PV _____	26
	<i>Item register</i> _____	27
	<i>Contact information</i> _____	31

1 Important information

Safety information

This manual describes installation and service procedures for implementation by specialists.

The manual must be left with the customer.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

This is an original manual. It may not be translated without the approval of NIBE.

Rights to make any design or technical modifications are reserved.

©NIBE 2021.

SYMBOLS



NOTE

This symbol indicates danger to person or machine.



Caution

This symbol indicates important information about what you should consider when installing or servicing the installation.



TIP

This symbol indicates tips on how to facilitate using the product.

MARKING

IP Classification of enclosure of electro-technical equipment.

General

RECOVERY



Leave the disposal of the packaging to the installer who installed the product or to special waste stations.



Do not dispose of used products with normal household waste. It must be disposed of at a special waste station or dealer who provides this type of service.

Improper disposal of the product by the user results in administrative penalties in accordance with current legislation.

COPYRIGHT

The manufacturer retains the copyright for this manual. These instructions may only be distributed, translated or copied with the written permission of the manufacturer. We reserve the right to make changes to the specifications or illustrations in this manual without prior notification.

Start-up protocol for solar panel system

Start-up protocol, which is filled in by the installer.

<i>Installer</i>	
Company:	
Installer:	
Telephone:	
E-mail	
<i>Product</i>	
Make:	Goodwe
Model:	
Inverter's serial number:	
Start-up date:	
Connected to compatible NIBE product:	
Inverter's position:	
<i>Measurement values</i>	
<input type="checkbox"/> Inverter test-run/started	The inverter is powered by the solar panels and will, for this reason, not start under all conditions. Measuring the values below ensures that the installation has been performed correctly.
<input type="checkbox"/> Checked polarity from the solar panels	
Current conditions (time, weather)	
Voltage AC:	
Voltage DC - String 1:	
Voltage DC - String 2:	
Voltage DC - String 3:	
Voltage DC - String 4:	
<i>Notes / Other</i>	
<i>Signature</i>	
Place and date:	
Signature:	
Clarification	

Installation inspection, solar panels

Current regulations require the installation to undergo an installation inspection before it is commissioned. The inspection must be carried out by a suitably qualified person.

√	Description	Notes	Signature	Date
Mounting				
	All work is carried out in accordance with the installation instructions, regulations and procedures regarding health, safety and the environment.			
	In the event of any deviations from the specifications, changes must be performed in dialogue with, and according to the guidance of, the supplier.			
	Roof surface checked and measured prior to start of installation.			
	Roof structure and condition of mounting points checked.			
	Projecting rails cut outside of outer clamps.			
	All roof brackets have been installed in accordance with the instructions and measures have been implemented to prevent damage caused by water, moisture or other environmental factors.			
	No holes have been made unnecessarily in the roof, and penetrations that have been created unintentionally or by mistake have been sealed.			
	Any damage to the product(s) has been reported to the supplier and rectified in the agreed manner.			
Electrical installation				
	Notification submitted to the power supplier, inverter data enclosed.			
	The property's main fuse checked against power from solar panels.			
	Cables are installed in accordance with applicable rules and regulations.			
	All MC4 connectors/connections have been double-checked to ensure they are correctly connected.			
	All cables are correctly routed and executed with suitable pipes, ducts or protection indoors and outdoors.			
	All roof and wall lead-throughs are protected against water, moisture and other environmental factors, and are executed in accordance with applicable rules and regulations.			
	DC cables are clearly marked.			
	All voltages on the DC side have been measured and noted in the start-up protocol.			
	The PV system is connected to the AC network and the installation has been functionally tested in accordance with the start-up protocol.			
	The supplied locking clips are installed to make the installation tamper resistant if the inverter is in a location where unauthorised persons have access.			
	Warning signs installed.			
	Notification of completion submitted to the power supplier.			
	Handover to the property owner completed.			
Heat pump, where applicable				
	EME 20 is installed between inverter and heat pump.			
	EME 20 activated and communication checked in heat pump.			

2 Delivery and handling

Delivery

Together with the driver, check the delivery immediately for the following:

- Visible damage (compressed packaging etc.)
- That the correct number of packages have been delivered
- That the solar panels in particular are undamaged.

Handling




Caution

Avoid knocks and mechanical damage to the solar panel. Do not lift the solar panels by the connections. Do not place the solar panels on objects that can damage them, nor pull or drag them over anything that can damage them.


Supplied components

PVK BASIC KIT 20-10

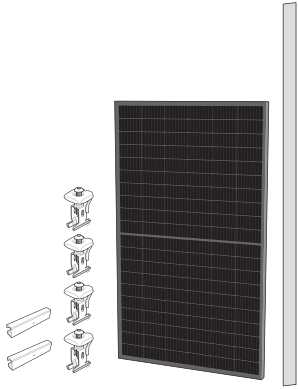


- Monocrystalline silicon cell panels 10 pcs
- Aluminium rails, 2.1 metres 10 pcs
- Aluminium joints 10 pcs
- Mountings for solar panels (assembly clamps) 24 pcs
- Connectors for electrical connection between the panels and the inverter, male and female, (electrical cable not included) 4 + 4 pcs
- PV cable with pre-installed connectors 7 metres 2 pcs

INVERTER

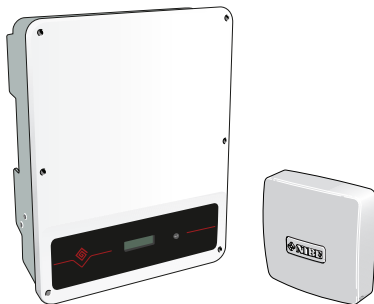


- Inverters 1 pcs
- Rating plates for electrical installation 4 pcs
- EME 20 1 pcs

ROOF BRACKET PRM XX-20, 20 PCS (AVAILABLE FOR VARIOUS ROOF TYPES)

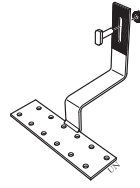


Tiled roof PRM 11-20

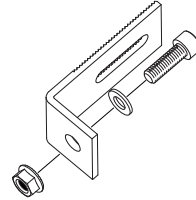


Retrofit kit, horizontal installation for tiled roof PRM 61-20




Sheet metal roof PRM 21-20

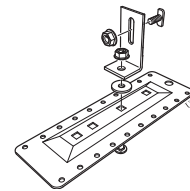

Felt roof PRM 41-20

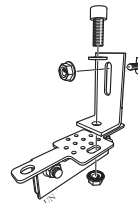

Seamed sheet metal roof PRM 31-20

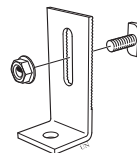

- Universal for aluminium rails PRM 51-20
- Lower section for the ceiling bracket is not supplied by NIBE
- Additional fastening for the relevant ceiling type is required

3 Installation

General

The installation must only be carried out by competent personnel.

The enclosed materials are those required for the installations described (see page 12). In special cases, these may need to be supplemented. If in doubt, contact your supplier. Information regarding applicable standards and regulations must be obtained prior to the installation and commissioning of the solar panel system. The electrical installation, and notification to the power supplier, must be carried out by a qualified electrician. The form for the inverter must be enclosed with the notification. Please note that commissioning the installation before the power supplier has given its approval is not permitted.



NOTE

Installation of a solar panel is an extensive intervention on an existing roof. The roof covering, particularly on converted and inhabited loft spaces or where the roof's minimum angle is undersized (relative to the covering), may require further measures against moisture because of wind pressure and drifting snow, this must be evaluated by the installer on a case to case basis. The roof design must be able to handle the wind and snow loading that can occur in the region.

STATIC LOAD

The installation is only permitted to be performed on roof surfaces or support structures with sufficient carrying capacity and strength. If necessary, the static load capacity of the roof and roof structure must be investigated before the solar panels are installed. Great importance should be placed on the condition of wooden roof structures and the possibilities for screwing the mounting devices for the solar panels to the structure. The roof structure must be reinforced if necessary. Inspection of the whole solar panel installation in accordance with DIN 1055 part 4 and 5, or in accordance with country-specific regulations, is required, in particular in areas that experience snowfall and strong winds. The characteristics of the installation's location (prevailing wind direction, whirlwinds, etc.) must also be included

in the calculation/estimate if these could involve increased loads. The solar panels must be installed so that snowdrifts resulting from snow guards or due to special conditions in the installation location cannot occur in the vicinity of the solar panels.

The distance from the outer edges of the roof must be at least 0.35 m at the sides of roofs and 0.2 m at ridges and eaves, in order to reduce the risk of the wind ripping the solar panels off.

The installation system according to DIN 1055 part 5 for snow zone II is intended for use up to 400 m above sea level. If the installation is made on a tiled roof, it is recommended that the snow is cleared if it reaches a depth of more than 30 cm on the solar panels (NOTE! If the snow has melted, been packed down and then more snow has fallen and so the density has increased, the snow may need to be cleared - even though it is not 30 cm deep.)

If there is a risk that the snow will slide down onto the panels and in particular behind the rear of raised panels, snow guards must be installed to prevent this.

Also ensure that the material under roofs with roof tiles is sufficiently stable to support the roof mounting points. Otherwise the roof must be reinforced. The installer must evaluate this and make a decision. If in doubt, a structural engineer needs to be consulted. We also recommend that the roof tiles should be ground down so there are no point loads between the roof and the roof brackets. The minimum distance between roof tiles at overlap points and the underside of the brackets is 3 mm, in order to allow for any movements in the mounting system due to the loads that can arise.

SAFETY INSTRUCTIONS

- Safety regulations for working on roofs and similar structures must be followed.
- Protection against falling parts must be installed. This is particularly important in locations where people pass below the roof/building.
- Personal safety equipment and/or scaffolding must be used when working on roofs, according to applicable regulations.

- Suitable measures must be taken during installation to ensure that the solar panel does not come loose and fall.
- Observe the safety distance to live conductors.

Installation and positioning

Using the map and the diagram, it is possible to estimate the annual value of the insolation on the surface where the solar panels are placed.

100% is the insolation at a horizontal surface. The angle of inclined surfaces is 45°.


The diagram shows insolation as a percentage of global radiation in relation to surfaces at various orientations and angles.

The map shows lines with the same global radiant flux, i.e. the insolation measured at horizontal surfaces.

1. Calculate the annual solar radiation using the map. The specific solar radiation for the installation is obtained as a percentage, based on the location of the solar panel according to the diagram.
2. Multiply the results by the installation's peak output (e.g. 3.6 / 7.2 / 10.8 / 14.4 / 18 / 21.6 / 25.2 kW).
3. Multiply the result 2 by a constant 0.9 to calculate the energy production in kWh/year (with a reservation for shade, dirt and snow coverage).

Examples: Prague, 7.2 kW, 45°, installation south (112 %).

$$1120 \times (112/100) \times 7.2 \times 0.9 = 8129 \text{ kWh/year}$$

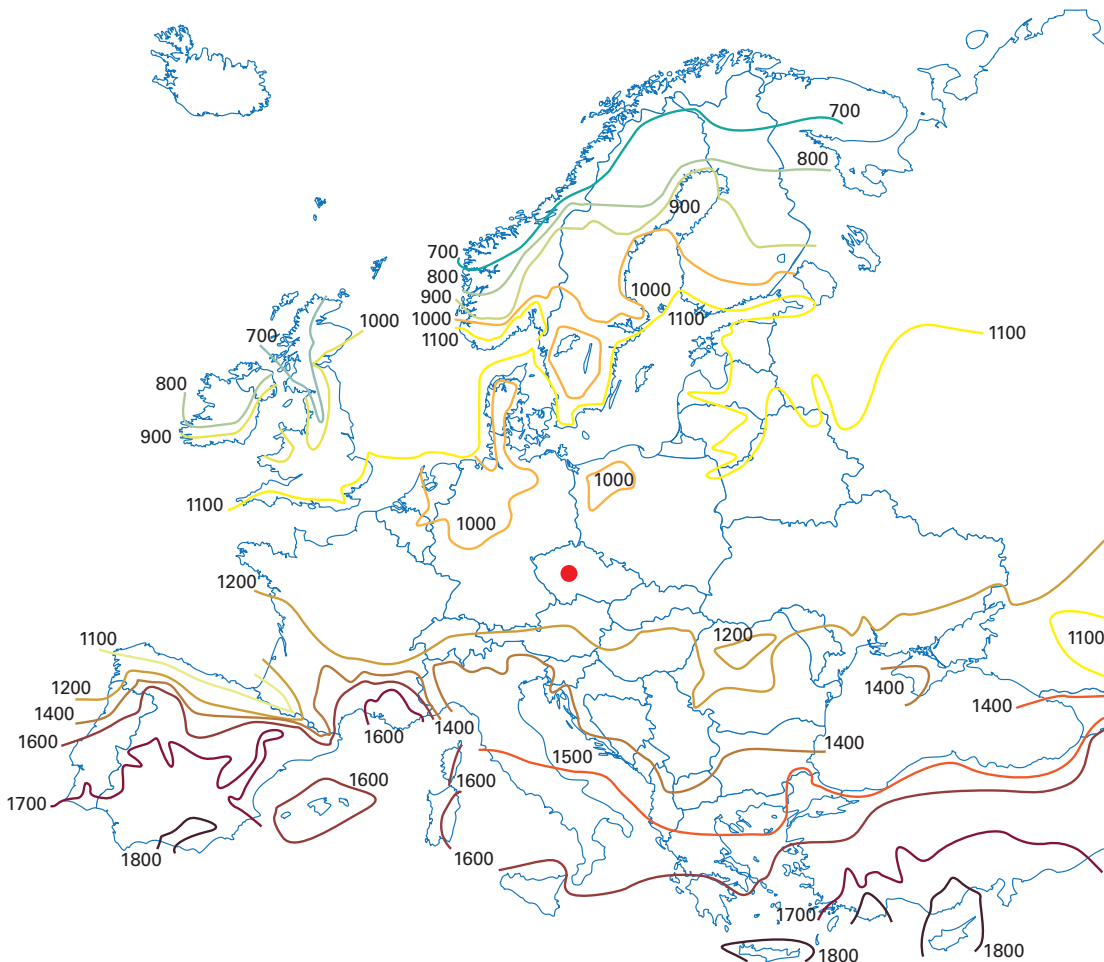

Functions

MYUPLINK / NIBE UPLINK

With NIBE Uplink and the Internet, you can obtain a quick overview and the current status of the solar panel system on your property. You obtain comprehensive and good supporting data, where you can see the current power and history. In the event of any malfunction, you also receive an alarm directly in the app, which allows you to take prompt countermeasures.

WIFI COMMUNICATION MODULE CMO 11 / CMO 22

With this accessory, you can connect the inverter to its portal without NIBE Uplink.

CMO 11/22 communicates with your home network via wifi.


See separate manual for more information and installation.

CMO 11 is used for inverter PVI 10 and CMO 22 is used for PVI 20.

4 Mounting

Installing solar panels in several groups

Examples of possible combinations per ten panels:

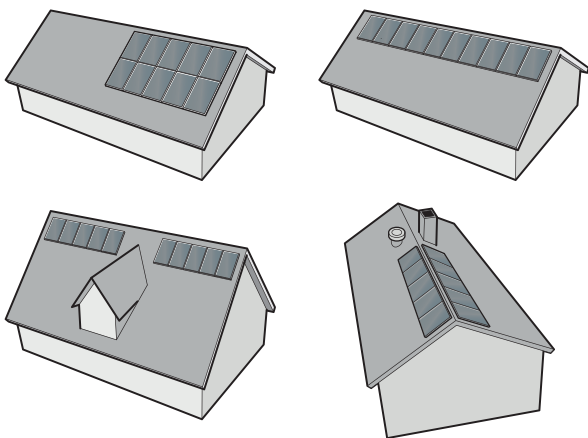


To reduce the risk of damage to the electric cables between the groups of solar panels, these can be run underneath the roof tiles or ceiling. To prevent moisture penetrating under the roof tiles or through the damp barrier at the holes for the electrical cables, diffusion sealed lead-ins must be fitted.

Make sure that the cabling is properly secured so it does not hang down and risk chafing.

Horizontal installation

The rails are installed vertically in the case of horizontal mounting.

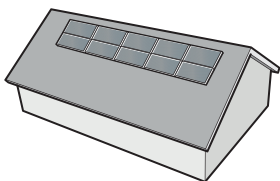

Specially adapted roof brackets for tiled roofs, sheet metal roofs, felt roofs or seamed sheet metal roofs. The type of roof bracket to be used must be specified when ordering. If the panels are installed in a different formation, additional mounting materials may be required.



Caution


Additional connectors and mounting materials may be required to install solar panels horizontally or in different groupings.

ADDITIONAL PANELS


Each package can be expanded with additional panels. This means that you have extremely good flexibility, allowing attractive roof installation.

Example

7.2 kW package installed on roof that is expanded by e.g. four solar panels (8.6 kW)

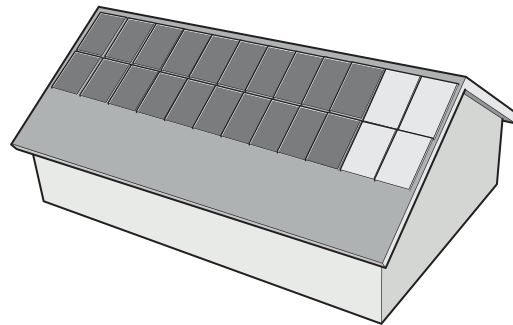

7.2 kW package installed on roof where you have decided not to install e.g. two panels (6.5 kW).

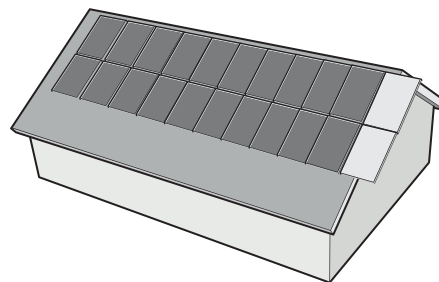

Number of solar panels per string and per package

The table shows how many panels you can have per string, as well as how many panels are standard and how many the inverter can cope with. The inverter has dual trackers, allowing the installation of different numbers of panels per string. If the number of panels is not sufficient to achieve the minimum number for two strings, you have to install all the panels in one string.

String = a number of panels connected in series.

PVI	Inverter max. DC:	Min./string	Max./string	Std./no.	Min. total	Max. total
10-3 *	3.9 kW	4	10	-	4	10
20-4	5.2 kW	7	14	10	7	14
20-6	7.8 kW	7	21	20	7	21
20-10	13 kW	7	21	30	7	36
20-12	15.6 kW	7	2x21 **	40	7	43
20-15	19.5 kW	7	2x21 **	50	7	54
30-20	26 kW	10	2x20 ***	70	10	72

* 1x230 V.

** Tracker one can manage one string or two equally long strings.

*** Two equally long strings per tracker (can also manage one string per tracker).

OVERVIEW, ASSEMBLY PARTS




NOTE

Ensure that the strength and load-bearing capacity of the roof structure are sufficient.




NOTE

If there is not a sufficiently stable substructure such as tongued and grooved boards or roof trusses to allow a durable installation the roof must be reinforced.

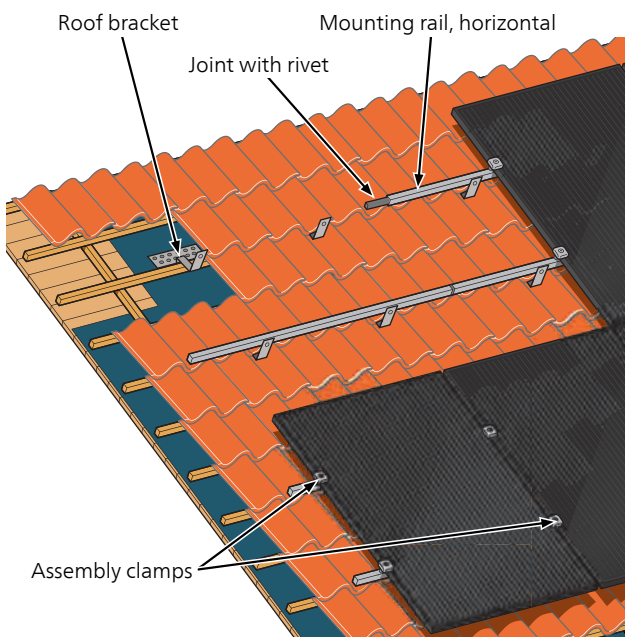

BEFORE INSTALLING SOLAR PANELS

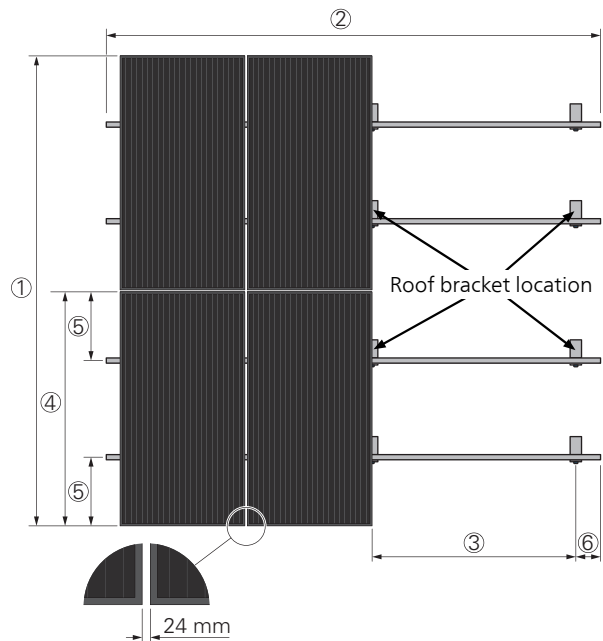


1. Number of rows of installed solar panels x height of solar panels (plus distance between the solar panels where relevant).
2. Number of solar panels installed horizontally x (solar panel's width + 24 mm) + 31 mm.
3. The horizontal distance between the mounting points for the roof brackets must not exceed c-c 1200 mm.
4. Solar panel height
5. Vertical location of the mounting points = panel height x 0.25.

- Max distance between the last roof bracket and the end of the mounting rail = 200 mm

ROOF BRACKETS IN TRUSS OR IN TONGUE AND GROOVE

REMOVE THE ROOF TILES

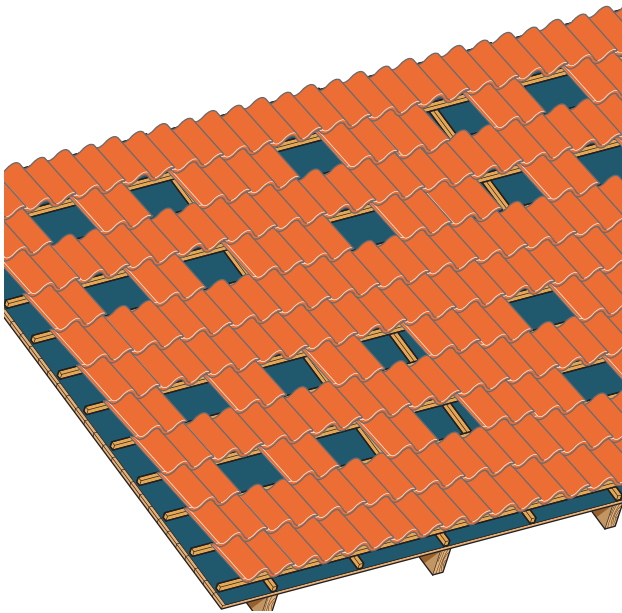


Mark out the positions for the roof brackets using chalk. Remove or slide up the marked roof tiles.



Caution

The image is only an example. For dimensions between roof brackets, see the section "Before installing solar panels" above.

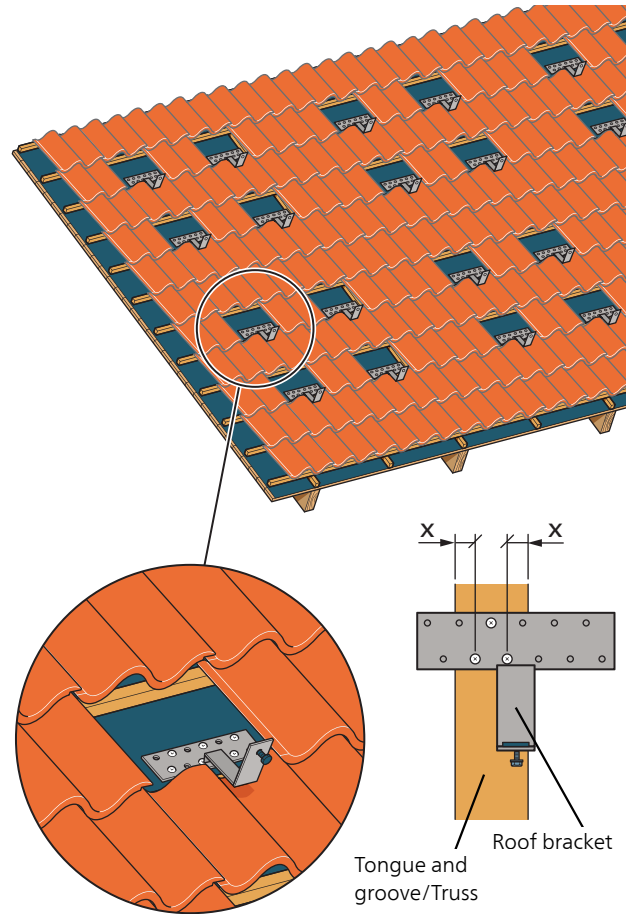

Secure each roof bracket in the trusses with 3 x wood screws. 2 x screws are located in the lower groove and 1 x screws are located in the upper groove (screws not supplied).




Caution

The distance to the edge (X) must be the same on both sides.

Installing the roof brackets in tongued and grooved boards

Secure each roof bracket with 6 x stainless steel construction screws, divided between the two grooves (screws not supplied).


SPACER PLATES

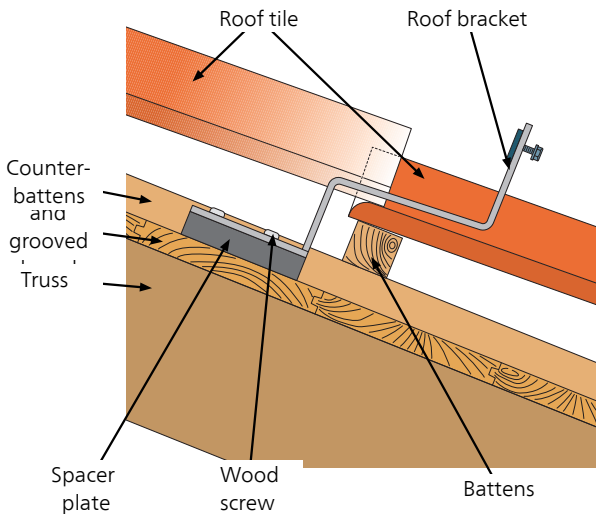

The roof bracket must not be pressed directly against the roof tile. Use a spacer plate if necessary?

The spacer plate must be made of a water and weather-resistant material (not supplied).



ADAPTING ROOF TILES

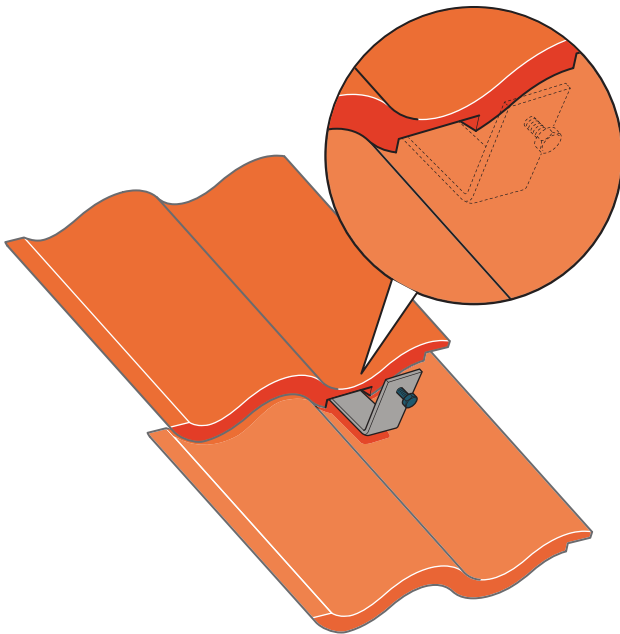

Use an angle grinder to make a cut-out in the part of the roof tile that covers the roof bracket, so the roof tile can lie against the substrate.


It may also be necessary to do this in the roof tile underneath.

HANGER BOLT FOR SHEET METAL ROOF

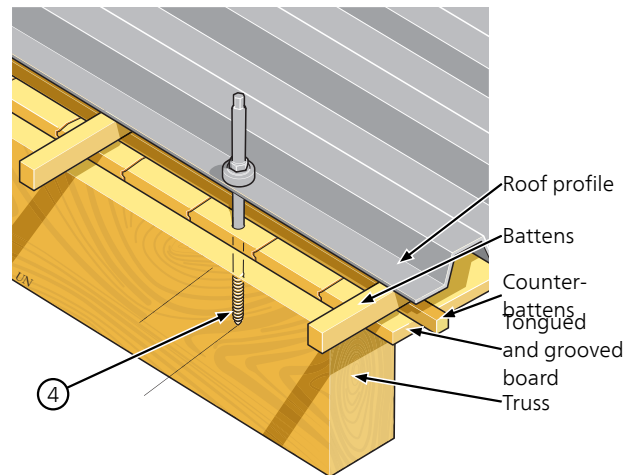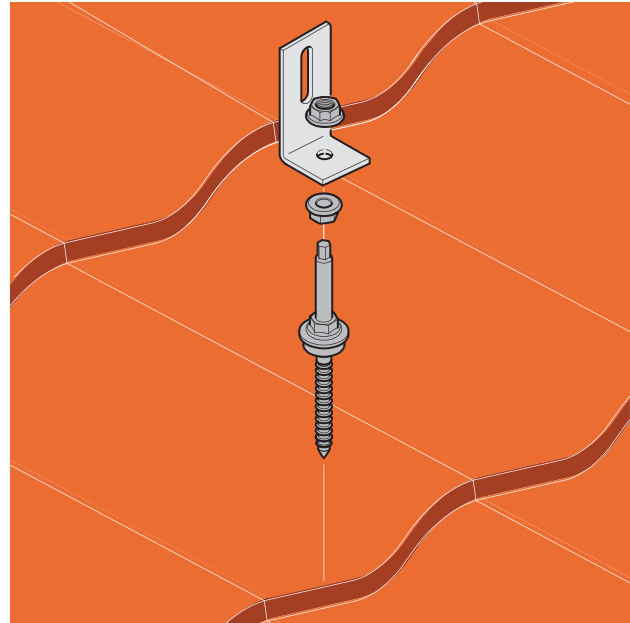

1. Drill holes in the roof tile or use existing holes
2. Install the screw pin in the truss sufficiently deeply, (all the threaded section must be screwed in), to install a seal against the roof sheet. A bitumen based roof and building sealant can be used - required for textured (sanded) surfaces
3. Install the L profile, adjust the height to the other screw pins
4. Ensure that the screw pin's entire thread is screwed into the roof truss.

MOUNTING BRACKETS FOR SOLAR PANELS ON SEAMED SHEET METAL ROOF

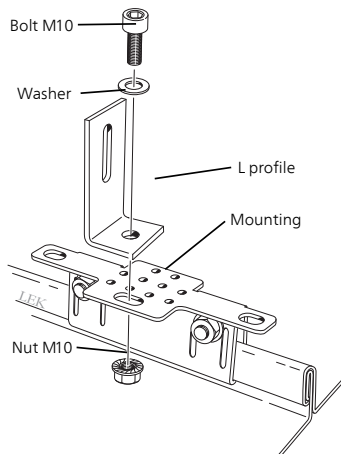


1. Install the mounting on the roof according to the usual rules and practice
2. Install the L profile with M10 bolt, washer and nut.


MOUNTING BRACKETS FOR SOLAR PANELS ON FELT ROOF

This applies for the installation of felt on a wooden roof, such as a garage roof. Depending on the roof structure, other felt/membrane variants may require different brackets. In such cases, consult a certified roofer.

In such cases, the PRM 51 universal mount may be required.

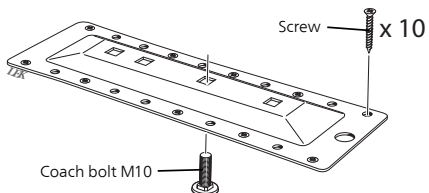

1. Install the plate on the roof according to the usual rules and practice.

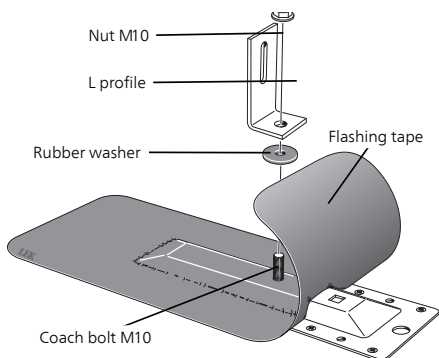


2. Install the L profile on the protruding coach bolt with M10 nuts.



Caution

The coach bolt should be installed from underneath before the plate is mounted on the roof.

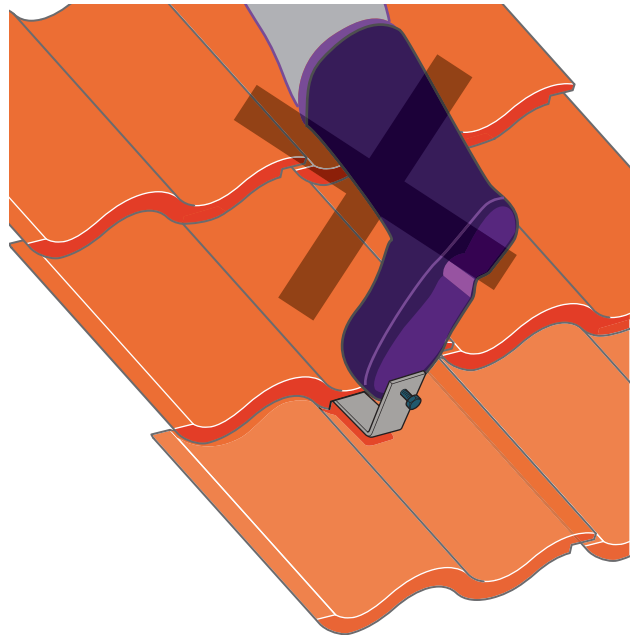


Caution

Never use the installed roof brackets as a ladder.


MOUNTING RAILS

Standing panels

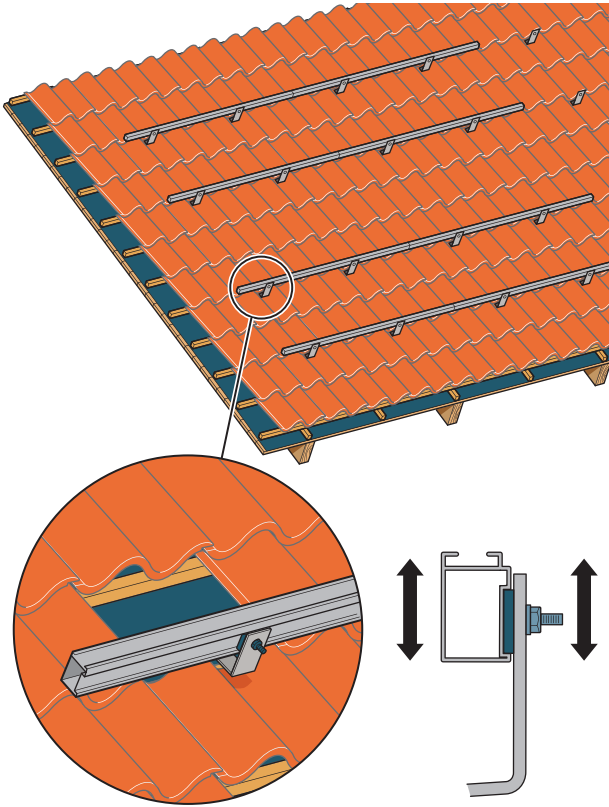

Mounting rails are secured in the roof brackets with T bolts and locking nuts (8 mm).

Landscape panels

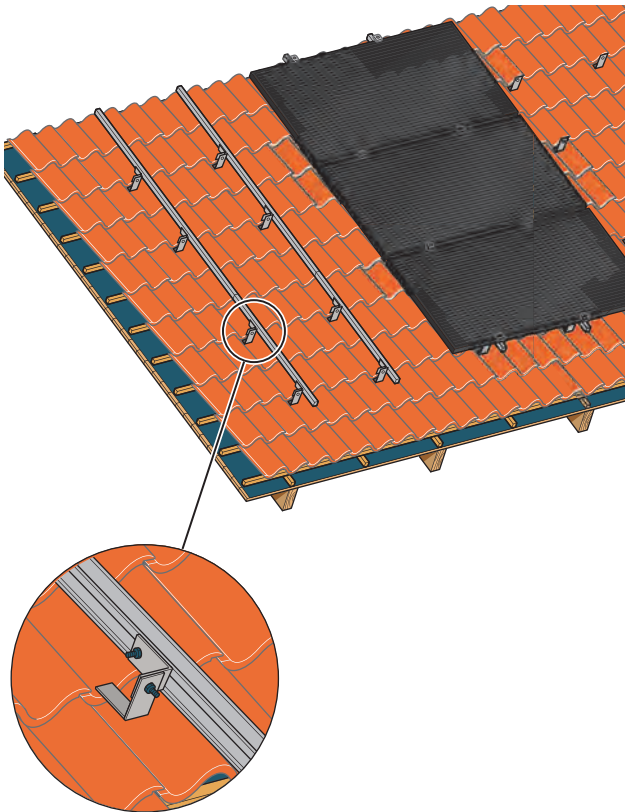

The PRM 61 retrofit kit is required for landscape panels.



Caution


Check that the head of the T-bolt is vertical in the mounting rail after tightening.

The rectangular hole in the roof bracket permits optimal height adjustment of the mounting rail.

Adjustment of the mounting rail height

Adjust the first mounting rails installed in relation to each other and the roof cladding. Then fix the mounting rail to the roof bracket by tightening the nut. Tightening torque 12-15 Nm.


JOIN THE MOUNTING RAILS

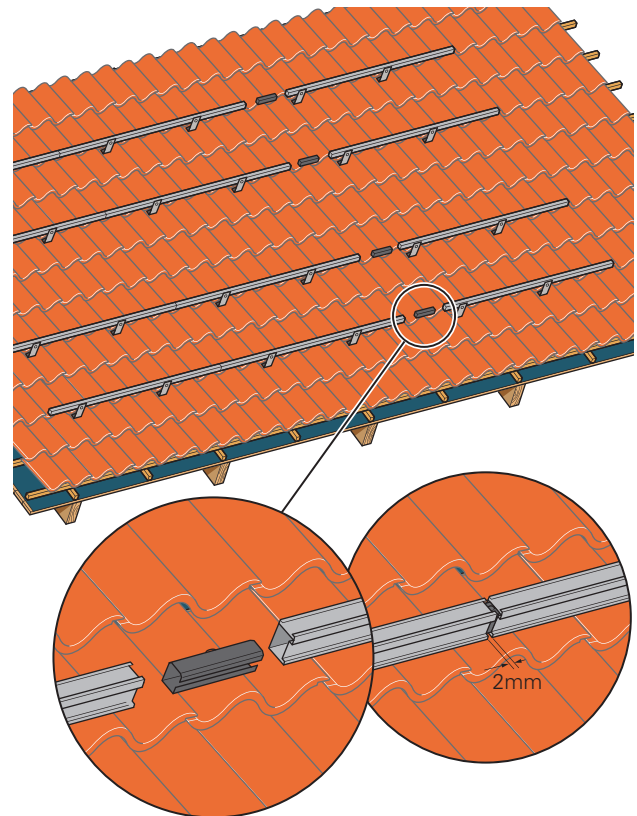

Slide the joint section with rivets into the mounting rail until it catches firmly on the raised part. Slide on the next mounting rail until it also catches on the raised part. Leave a space of 2 mm to compensate for thermal expansion.

A wider expansion joint is required after 21 panels, the joint must measure at least 100 mm.

INSTALLING SOLAR PANELS IN THE FIRST (BOTTOM) ROW

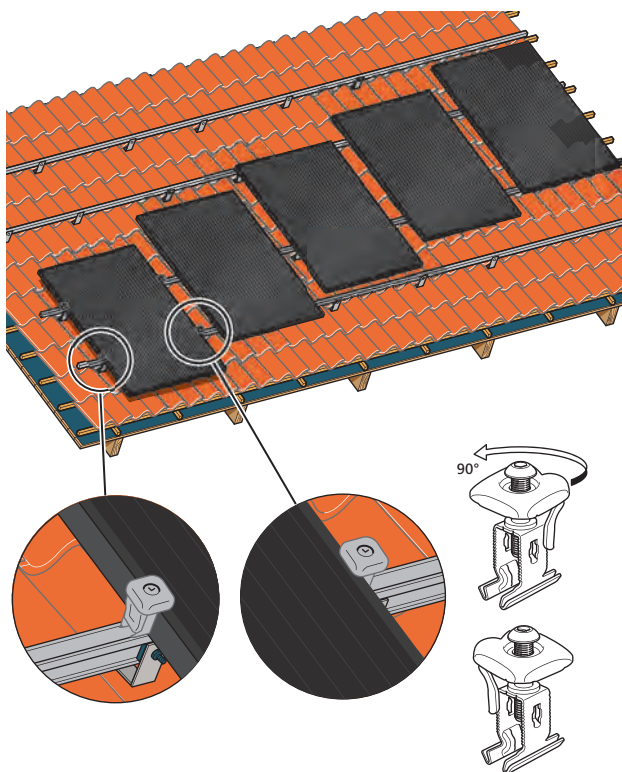

Caution

The assembly clamps can be twisted and are adapted for use both at the outer edges and between the solar panels.

1. Position the first solar panel on the mounting rail.
2. Click the assembly clamp into the first (bottom) row 5 mm from the end of the mounting rail.
3. Secure the solar panel with the assembly clamp screw, tighten to 8 Nm.
4. Click the assembly clamp into the installation rail on the right-hand side of the solar panel. Slide the assembly clamp towards the solar panel and connect.
5. Position the second solar panel on the mounting rail and move the solar panel towards the assembly clamp. Connect the cable to the previous solar panel. Secure the wiring between the solar panels.
6. Tighten the assembly clamp, tighten to 12-15 Nm.
7. Install further solar panels according to point 4 to 6.
8. After the last solar panel in the row 1 has been positioned on the mounting rail and connected, the assembly clamp is clicked into the mounting rail from the right. Minimum distance between the assembly clamp and the end of the mounting rail is 5 mm.
9. Secure the solar panel with the assembly clamp screw, tighten to 8 Nm.



Caution

Secure the wiring between the solar panels.




Caution

Take the return cable when installing the panels. See section Electrical connection/Cable routing



Caution


Measure the voltage at the connected panels on the roof before removing any scaffolding.

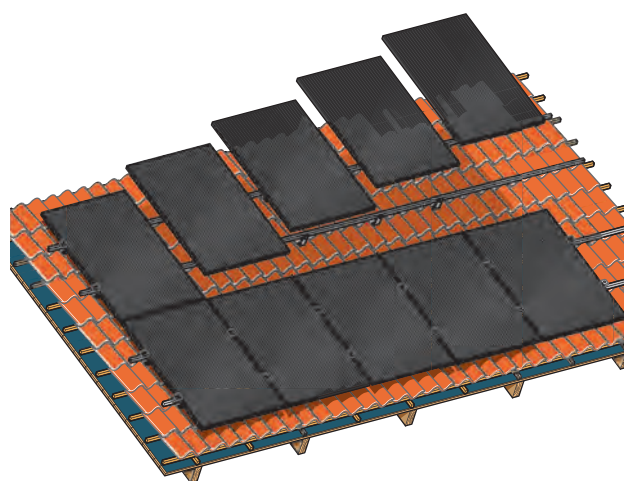

Install the following rows in the same way.

5 Electrical connection

Outline diagram

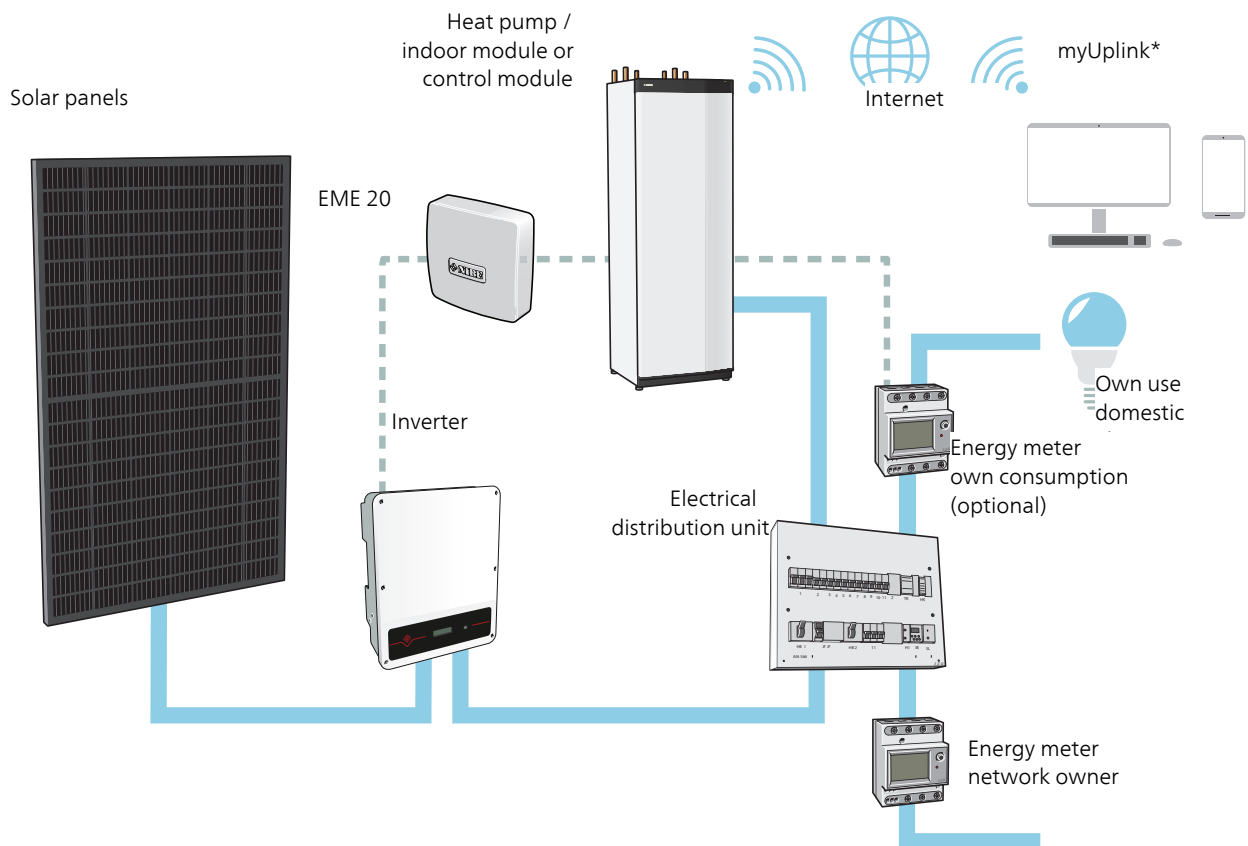

* myUplink for the S-series and NIBE Uplink for the F-series.



NOTE

Electrical installation and service must be carried out under the supervision of a qualified electrician, and in accordance with applicable electrical safety regulations.

Factory-fitted junction boxes prepared with cables for positive and negative connections can be found on the reverse of the solar panels. The cables are fitted with quick-release connectors.

The electrical cables between the panels and the inverter must be double insulated and UV/weather-resistant photovoltaic cables, 4 mm² up to 100 m length (not supplied).

The inverter is connected and fused to the fuse panel as if it was a load with the same output. The inverter includes a factory-fitted 300 mA residual current device. If the inverter is to be connected to an external residual current device, this must be 300 mA or larger and of type A.



NOTE

The inverter is powered by the voltage from the solar panels. At night and in poor light, the inverter may therefore be switched off.




Caution

Check that the polarity is correct when connecting to the inverter.


INSTALLING CONNECTORS ON DC WIRING

DC connectors of the MC-4 type are supplied with all packages.

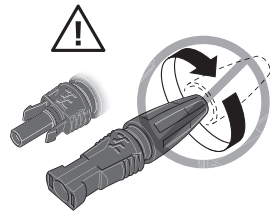


1. The connector's sleeve must not be disconnected until the cable has been inserted into the connector.


2. Strip the cable 15-16.5 mm

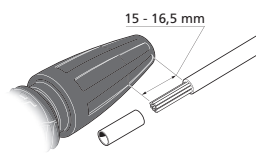


3. Twin the cable's strands.

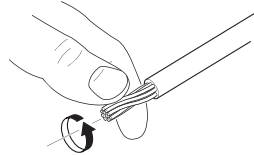


4. Insert the cable into the connector until a "click" is heard.

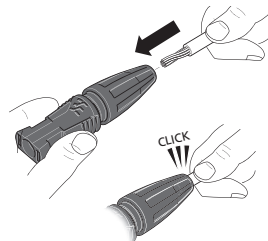

5. Check that the cable is securely in place by carefully pulling it.

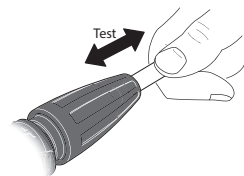

6. Fasten the connector's sleeve so that the cable is secure and so that the sleeve is at the bottom (3-4 Nm)

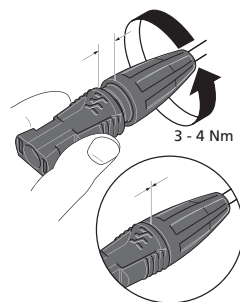


CONNECTING INVERTERS

For assembly and installation, consult the quick guide.
For more information about the inverter, consult the enclosed manual.


QUICK GUIDE

Installation area


PVI 20-XX, PVI 10-3

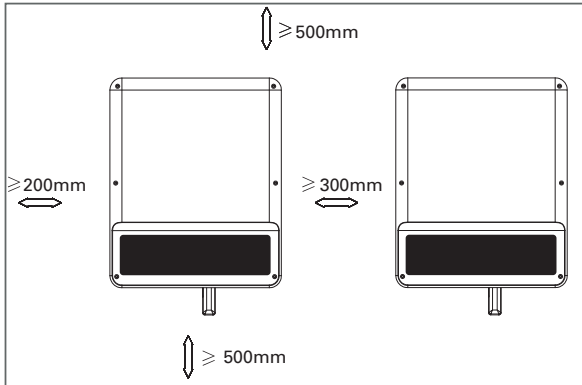

PVI 10-20

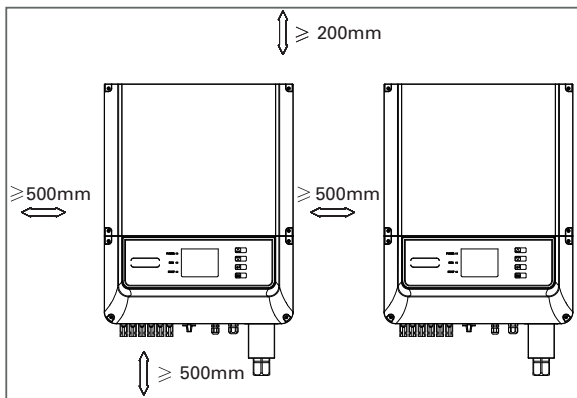


Hole pattern for the bracket

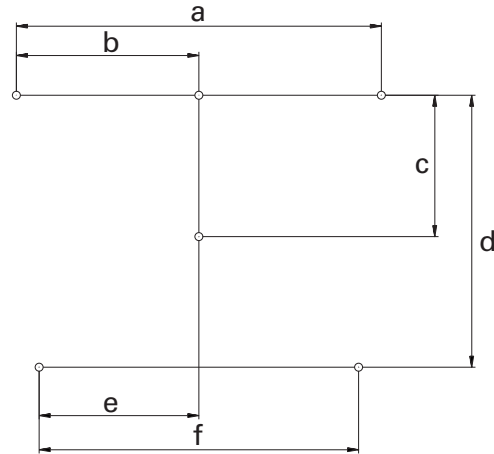


	PVI 10-3	PVI 10-20	PVI 20-XX
a	250 mm	457 mm	200 mm
b	125 mm	228.5 mm	100 mm
c	120 mm	117.5 mm	45 mm
d	240 mm	222 mm	-
e	-	200 mm	-
f	265 mm	400 mm	-

Fitting the wall bracket



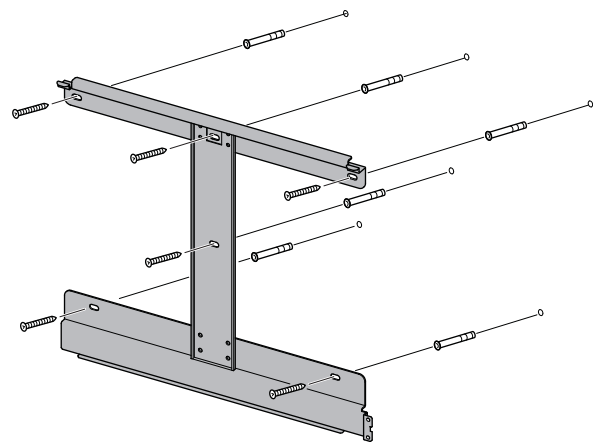


Fitting the inverter

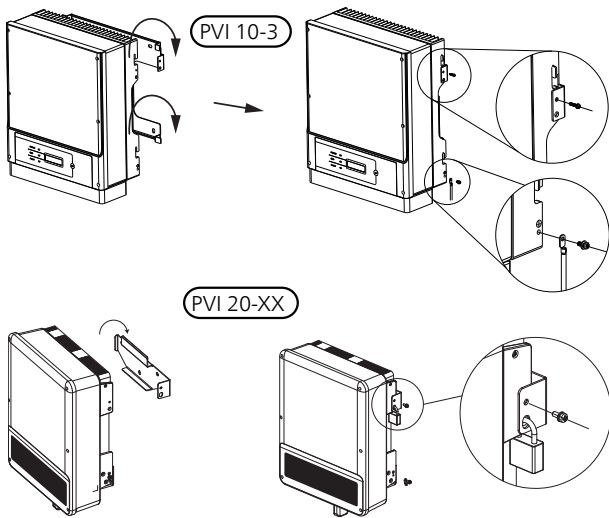

Fit the inverter on the wall bracket according to the diagram above.
The inverter must also be earthed as illustrated, then cover the switch with silicone to protect against corrosion.


Switch

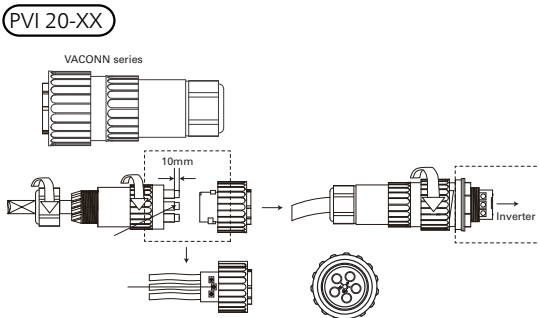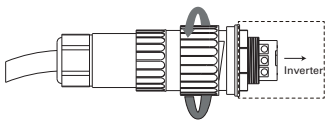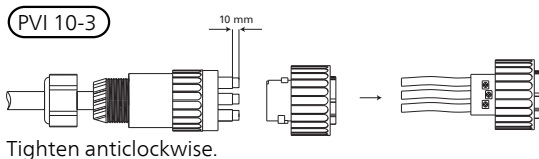

WARNING!

Check that none of the screws protrude from the connector and that they are tightened.

RS-485 - Communication

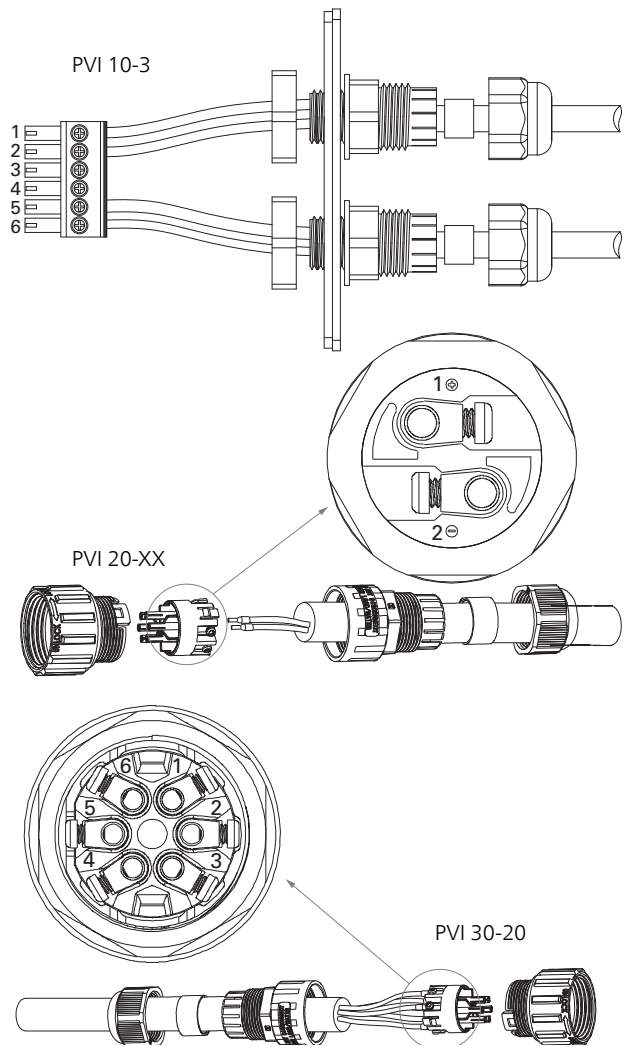

PVI 10/20

Connection	Function
1	RS485 + (B)
2	RS485 - (A)
3	Not used
4	Not used
5	RS485 + (B)
6	RS485 - (A)


PVI 30

Connection	Function
1	RS485 + (B)
2	RS485 + (B)
3	RS485 - (A)
4	RS485 - (A)
5	Not used
6	Not used

Inspection of the installation

Check that all screws and cable grommets are tightened and sealed.
The guarantee does not cover faults caused by screws/cable grommets that have not been tightened.

Set time and date.

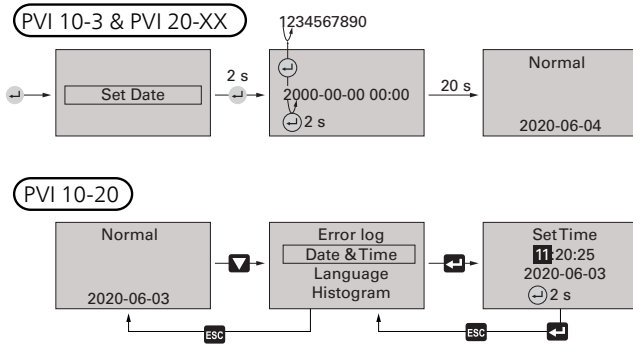

Connecting EME 20

See separate manual for EME 20

CABLE ROUTING

Cable with pre-installed connectors (2 x 7 m) is supplied and can be used for roof installation.

Lightning protection

There are occasions when lightning protection can affect how the installation is installed. See the applicable laws and regulations.



NOTE

In order to minimise the risk of induced voltages in the event of lightning, the return cable must be laid together with connection cables for the panels connected in series.

6 Maintenance

Service

The solar panels must be regularly inspected.

Check that the glass in the panels and the aluminium frames are not damaged.

Check that electrical wiring and connections are intact and undamaged.

Mechanical cleaning is not usually required and is not recommended.

7 Technical specifications

Technical specifications

<i>Solar panel</i>	<i>kW</i>	3.6	7.2	10.8	14.4	18	21.6	25.2	
Rated output at STC (P _{mpp})	W _p	360							
Rated voltage (U _{mpp})	V	34.3							
Rated current (I _{mpp})	A	10.5							
External; dimensions (LxWxH)	mm	1755x1038x35							
Version with aluminium frame		Anodised black							
Weight panel	kg	21							
Connection cables with pre-installed connectors	mm	2x1000							
<i>PVK basic kit</i>		30-10				30-20			
Part No.		057 292				057 293			
<i>Inverter</i>		<i>PVI 10-3</i>	<i>PVI 20-4</i>	<i>PVI 20-6</i>	<i>PVI 20-10</i>	<i>PVI 20-12</i>	<i>PVI 20-15</i>	<i>PVI 30-20</i>	
Voltage	V	1x230	3x400						
Outer dimensions (WxHxD)	mm	347x432x145	354x433x147		354x433x155		516x650x203		
Weight	kg	14	15		16	18		39	
Max. number of strings		2				3		4	
Cooling		Passive				Fan			
Colour		White							
Number of trackers (MPPT)		2							
Enclosure class		IP65							
Max. power output ¹	kW	3	4	6	10	12	15	20	
Recommended fuse size	A	16			25	32		40	
Part No.		057 200	057 276	057 277	057 278	057 279	057 281	057 286	
<i>EME 20 (only included in inverter PVI 10/20)</i>									
External dimensions (LxWxH)	mm	81x81x28							
Enclosure class		IP22							
Part No.		057 188							

¹ Has to be fused according to the max. power output or the max. DC power, if that is lower.

8 Accessories

Not all accessories are available on all markets.

Detailed information about the accessories and complete accessories list available at nibe.eu.

Solar package NIBE PV

1 x PVK 30-1 Solar panel with mounting kit

(4 x assembly clamps,

1 x aluminium rail, 2 x joints)

Part no. 057 294

1 pcs PRM 11-1 Roof bracket, tiled roof

Part no. 057 181

20 x PRM 11-20 Roof bracket, tiled roof

Part no. 057 207

RSK no. 620 41 07

1 x PRM 61-1 Roof bracket, horizontal installation for tiled roof. Complement to PRM 11-1.

Part no. 057 250

20 x PRM 61-20 Roof bracket, horizontal installation for tiled roof. Complement to PRM 11-20.

Part no. 057 249

1 pcs PRM 21-1 Roof bracket, sheet metal roof

Part no. 057 182

20 pcs PRM 21-20 Roof bracket, sheet metal roof

Part no. 057 208

1 pcs PRM 41-1 Roof bracket, felt roof

Part no. 057 183

20 pcs PRM 41-20 Roof bracket, felt roof

Part no. 057 209

1 pcs PRM 31-1 Roof bracket, seamed sheet metal roof

Part no. 057 184

20 pcs PRM 31-20 Roof bracket, seamed sheet metal roof

Part no. 057 210

1 x PRM 51-1 Ceiling bracket universal for aluminium rails

Part no. 057 228

20 x PRM 51-20 Ceiling bracket universal for aluminium rails

Part no. 057 227

1 x Wifi communication module CMO 11 (for the PVI 10-series)

Part no. 057 252

1 x Wifi communication module CMO 22 (for the PVI 20/30-series)

Part no. 057 283

Item register

A

- Accessories, 26
- Accessory, 26
 - CMO 11, 26
 - CMO 22, 26
- Communication module, 26
- Roof bracket, felt roof, 26
- Roof bracket, horizontal installation for tiled roof, 26
- Roof bracket, seamed sheet metal roof, 26
- Roof bracket, sheet metal roof, 26
- Roof bracket, tiled roof, 26
- Roof bracket, universal, for aluminium rails, 26

B

- Basic kit PVK 20-10, 8

C

- Cable routing, 23
- CMO 11, 11
- CMO 22, 11
- Communication module, 11
- Components included
 - Basic kit, 8
 - Inverter, 8
 - Roof brackets, 8

E

- Electrical connection, 19
 - Cable routing, 23
 - Installing connectors on DC wiring, 20
 - Inverter, 21
 - Lightning protection, 23

F

- Functions
 - Communication module, 11
 - Internet, 11

G

- Global radiant flux, 10

I

- Important information
 - Recovery, 4
 - Safety information, 4
 - Start-up protocol, 5
- Insolation, 10
- Installation, 12
 - Adapting roof tile, 15
 - Additional panels, 12
 - Before installation, 13

- Example of installation, 12
- Hanger bolt for sheet metal roof, 15
- Horizontal installation, 17
- Join the mounting rails, 17
- Mount for felt roof, 16
- Mount for seamed sheet metal roof, 16
- Number of panels per string and per package, 13
- Overview, assembly parts, 13
- Panels in the bottom row, 18
- Removal of roof tiles, 14
- Roof bracket in tongue and groove, 14
- Roof bracket in truss, 14
- Solar panels in multiple groups, 12
- Spacer plate, 15
- Vertical installation, 17
- Installing connectors on DC wiring, 20
- Inverter PVI 10, 8
- Inverter PVI 20, 8

L

- Lightning protection/potential compensation, 23

M

- Maintenance
 - Service, 24
- Map
 - Solar map, 10
- Marking, 4
- myUplink, 11

N

- NIBE Uplink, 11

O

- Outline diagram
 - Electrical connection, 19
 - EME 20, 19
 - Energy meter, 19
 - Inverter, 19
 - Residual current device, 19
 - Solar panels, 19

Q

- Quick guide, 21
 - Connector, 22
 - EME 20, 23
 - Hole pattern for the bracket, 21
 - Installation area, 21
 - Installation inspection, 22
 - Installing inverter, 22

Installing wall bracket, 21
RS-485, 22
Time and date, 23

R

Residual current device, 19
Roof brackets, 8
Roof combinations, 12

S

Safety information, 4
 Marking, 4
 Symbols, 4
Safety instructions, 9
Service, 24
Set time and date, 23
Solar map, 10
Start-up protocol, 5
Static load, 9
Symbols, 4

T

Technical Data, 25

W

Wifi, 11

Contact information

AUSTRIA

KNV Energietechnik GmbH
Gahberggasse 11, 4861 Schörfling
Tel: +43 (0)7662 8963-0
mail@knv.at
knv.at

CZECH REPUBLIC

Družstevní závody Dražice - strojírna
s.r.o.
Dražice 69, 29471 Benátky n. Jiz.
Tel: +420 326 373 801
nibe@nibe.cz
nibe.cz

DENMARK

Vølund Varmeteknik A/S
Industrivej Nord 7B, 7400 Herning
Tel: +45 97 17 20 33
info@volundvt.dk
volundvt.dk

FINLAND

NIBE Energy Systems Oy
Juurakkotie 3, 01510 Vantaa
Tel: +358 (0)9 274 6970
info@nibe.fi
nibe.fi

FRANCE

NIBE Energy Systems France SAS
Zone industrielle RD 28
Rue du Pou du Ciel, 01600 Reyrieux
Tél: 04 74 00 92 92
info@nibe.fr
nibe.fr

GERMANY

NIBE Systemtechnik GmbH
Am Reiherpfahl 3, 29223 Celle
Tel: +49 (0)5141 75 46 -0
info@nibe.de
nibe.de

GREAT BRITAIN

NIBE Energy Systems Ltd
3C Broom Business Park,
Bridge Way, S41 9QG Chesterfield
Tel: +44 (0)845 095 1200
info@nibe.co.uk
nibe.co.uk

NETHERLANDS

NIBE Energietechnik B.V.
Energieweg 31, 4906 CG Oosterhout
Tel: +31 (0)168 47 77 22
info@nibenl.nl
nibenl.nl

NORWAY

ABK-Qviller AS
Brobekkveien 80, 0582 Oslo
Tel: (+47) 23 17 05 20
post@abkqviller.no
nibe.no

POLAND

NIBE-BIAWAR Sp. z o.o.
Al. Jana Pawla II 57, 15-703 Bialystok
Tel: +48 (0)85 66 28 490
biawar.com.pl

RUSSIA

EVAN
bld. 8, Yuliusa Fuchika str.
603024 Nizhny Novgorod
Tel: +7 831 288 85 55
info@evan.ru
nibe-evan.ru

SWEDEN

NIBE Energy Systems
Box 14
Hannabadsvägen 5, 285 21 Markaryd
Tel: +46 (0)433-27 3000
info@nibe.se
nibe.se

SWITZERLAND

NIBE Wärmetechnik c/o ait Schweiz
AG
Industriepark, CH-6246 Altishofen
Tel. +41 (0)58 252 21 00
info@nibe.ch
nibe.ch

For countries not mentioned in this list, contact NIBE Sweden or check nibe.eu for more information.

NIBE Energy Systems
Hannabadsvägen 5
Box 14
SE-285 21 Markaryd
info@nibe.se
nibe.eu

IHB EN 2117-5 431707

This manual is a publication from NIBE Energy Systems. All product illustrations, facts and data are based on the available information at the time of the publication's approval. NIBE Energy Systems makes reservations for any factual or printing errors in this manual.

©2021 NIBE ENERGY SYSTEMS

