

Ventilation heat exchanger NIBE ERS 30-400

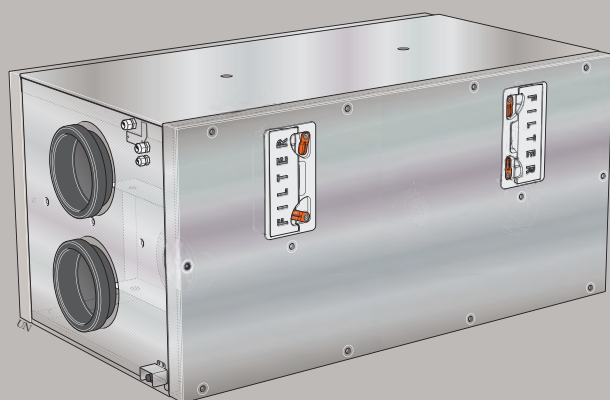


Table of Contents

1	<i>Important information</i> _____	4	9	<i>Accessories</i> _____	20
	Safety information _____	4			
	Serial number _____	4	10	<i>Technical data</i> _____	20
	Recovery _____	5		Dimensions ERS 30 _____	20
	Inspection of the installation _____	6		Technical specifications _____	21
				Energy labelling _____	22
2	<i>Delivery and handling</i> _____	7		Electrical circuit diagram _____	23
	Transport and storage _____	7			
	Assembly _____	7		<i>Item register</i> _____	24
	Removing the covers _____	7		<i>Contact information</i> _____	27
3	<i>The ventilation heat exchanger design</i> _____	8			
	Pipe connections _____	8			
	Sensors etc. _____	8			
	Electrical components _____	8			
	Ventilation _____	8			
	Miscellaneous _____	9			
4	<i>Pipe and ventilation connections</i> _____	10			
	Condensation water drain _____	10			
	General ventilation connections _____	11			
	Ventilation flow _____	11			
	Adjusting ventilation _____	11			
	Preheating outdoor air _____	11			
5	<i>Electrical connection</i> _____	12			
	Connecting to main product _____	12			
	Outside air sensor _____	14			
6	<i>Commissioning and adjusting</i> _____	15			
	Preparations _____	15			
	Filling and venting _____	15			
	Start-up and inspection _____	15			
7	<i>Program settings</i> _____	16			
	Start guide _____	16			
	Menu system _____	16			
8	<i>Disturbances in comfort</i> _____	19			
	Troubleshooting _____	19			

1 Important information

Safety information

This manual describes installation and service procedures for implementation by specialists.

The manual must be left with the customer.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Rights to make any design or technical modifications are reserved.

©NIBE 2019.

SYMBOLS



NOTE

This symbol indicates danger to person or machine.



Caution

This symbol indicates important information about what you should consider when installing or servicing the installation.




TIP

This symbol indicates tips on how to facilitate using the product.

MARKING

Serial number

The serial number can be found at the top, to the left of the ventilation connection for exhaust air.

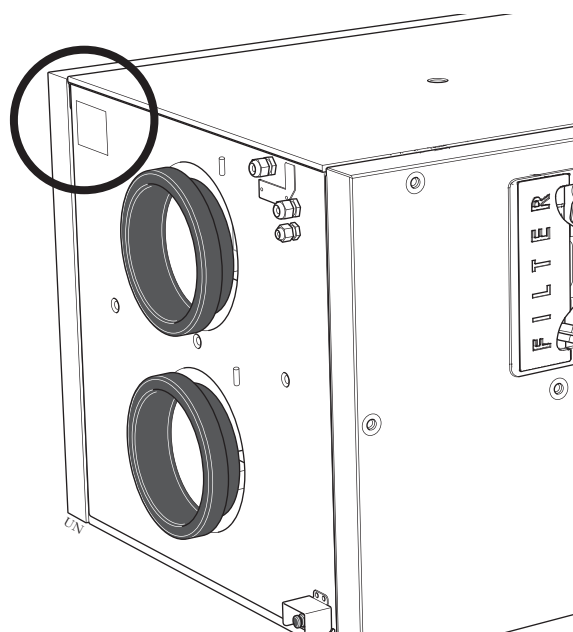

Caution

You need the product's serial number for servicing and support.

Recovery



Leave the disposal of the packaging to the installer who installed the product or to special waste stations.

■ When disposing of the product, its constituent materials and components, e.g. compressors, fans, circulation pumps and circuit boards, must be disposed of at a special waste station or dealer who provides this type of service.

To access the separate components, refer to the section that shows the construction of the product. No special tools are required for access.

Improper disposal of the product by the user results in administrative penalties in accordance with current legislation.

Inspection of the installation

Current regulations require the heating installation to be inspected before it is commissioned. The inspection must be carried out by a suitably qualified person. In addition, fill in the page for the installation data in the User Manual.

✓	Description	Notes	Signature	Date
	Electricity (page 12)			
	Connections			
	Main voltage			
	Fuses property			
	Earth circuit-breaker			

2 Delivery and handling

Transport and storage

ERS 30 should be transported and stored in the dry.


Assembly

ERS 30 must be placed on a stable surface to minimise the risk of vibrations.


- Wherever the unit is located, any joists that back onto a sound-sensitive room should be fitted with sound-proofing.
- Condensation comes from the ventilation heat exchanger. A condensation outlet with a water seal must be installed and routed to an internal drain.
- The ventilation heat exchanger's installation area should always have a temperature of at least $-25\text{ }^{\circ}\text{C}$ and max. $50\text{ }^{\circ}\text{C}$.

Removing the covers


1. Open the filter cover as illustrated.

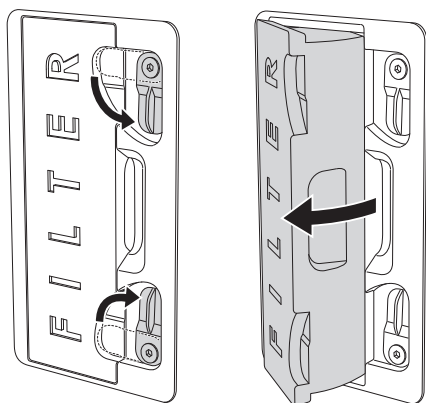


2. Pull out the filters.

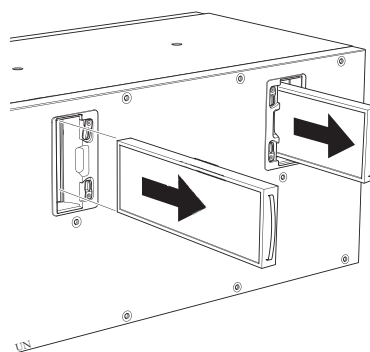


3. Unscrew the screws as illustrated and pull out the front panel.

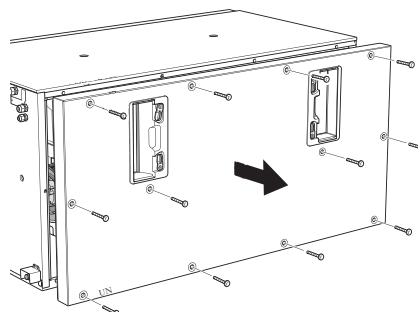

4. Unscrew both of the screws at the top and lift off the top panel.

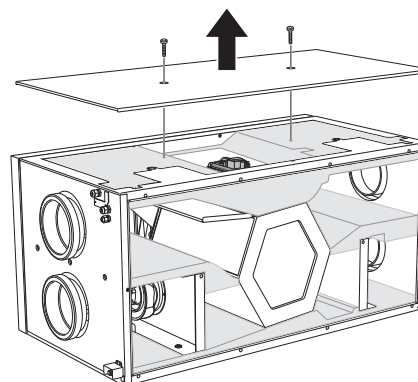

3 The ventilation heat exchanger design

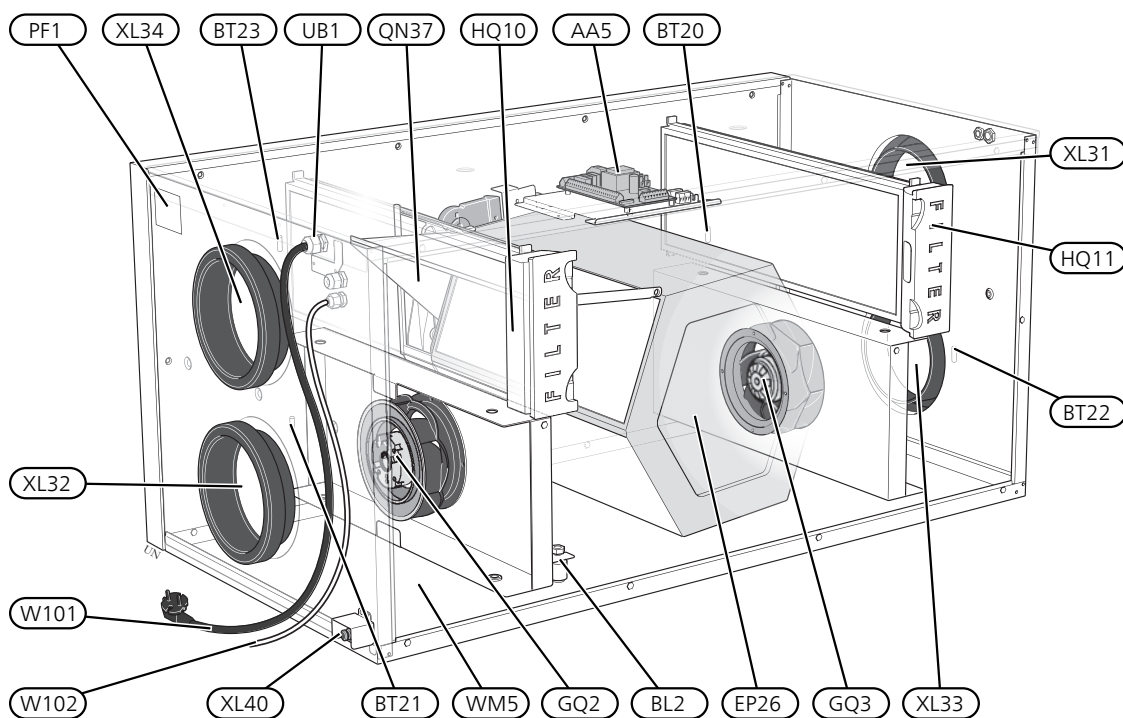

Pipe connections

XL31	Ventilation connection, exhaust air
XL32	Ventilation connection, extract air
XL33	Ventilation connection, supply air
XL34	Ventilation connection, outdoor air
XL40	Condensation water drain

Sensors etc.

BL2	Level monitor
BT20	Temperature sensor, exhaust air
BT21	Temperature sensor, extract air
BT22	Temperature sensor, supply air
BT23	Temperature sensor, outdoor air

Electrical components

AA5	Accessory card
UB1	Cable gland
W101	Cord with connection plug
W102	Communication cable

Ventilation

EP26	Heat exchanger
GQ2	Exhaust air fan
GQ3	Supply air fan
HQ10	Exhaust air filter
HQ11	Supply air filter
QN37	Bypass damper

Miscellaneous

PF1 Type plate

WM5 Condensation water trough

Designations according to standard EN 81346-2.

4 Pipe and ventilation connections

Condensation water drain

ERS 30 can produce several litres of condensation water per day. It is therefore important for the condensation outlet to be correctly executed and for the ventilation heat exchanger to be installed horizontally.

Check that the water seal is airtight and firmly in position. The connection must be made so that the user can check and top up the water seal, without opening ERS 30.

The connection for the condensation outlet measures $\varnothing 15$ mm.

If the ventilation heat exchanger has to be installed in a cold area, the condensation water drain pipe must be insulated so the condensation water in the pipe does not freeze. It is also recommended that the water seal is mounted in a warm area to guarantee that the water in the water seal does not freeze. If it cannot be guaranteed that insulation will protect the condensation water drain pipe against frost, a thermostat-controlled heating cable must be installed around the condensation water drain pipe. The installation from the water seal to the drain must be carried out with a requisite slope of at least 1 %.

CLEANING THE CONDENSATION WATER DRAIN


Condensation forms when ERS 30 is working. This condensation is led off and collected in the condensation water drain. Apart from water, a certain amount of dust and particles also collect there.

Check regularly that the condensation water drain and any floor drains are not blocked; water must be able to run through freely. Clean, if necessary.



NOTE

During operation, negative pressure arises in the ventilation heat exchanger, which means that a water column of at least 100 mm must be guaranteed in the water seal.

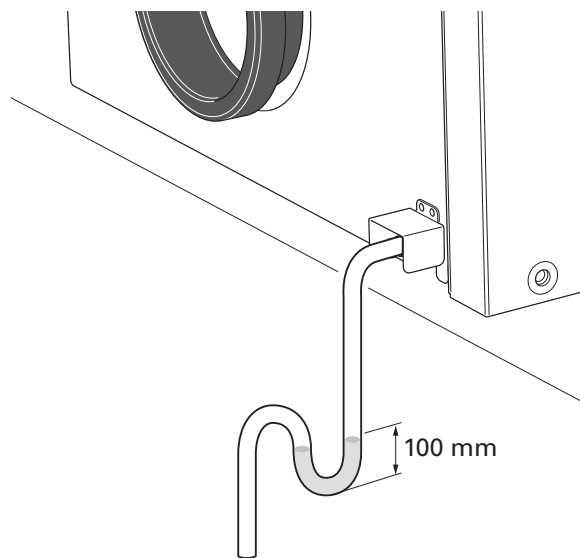

General ventilation connections

- Ventilation installation must be carried out in accordance with current norms and directives.
- Provision must be made for inspection and cleaning of the duct.
- The air duct system must be a minimum of air tightness class B.
- To prevent fan noise being transferred to the ventilation devices, silencers should be installed in the duct system. In the event of ventilation devices in noise-sensitive rooms, silencers must be installed.
- The extract air and outdoor air ducts are insulated using diffusion-proof material (at least PE30 or equivalent) along their entire lengths.
- Ensure that the condensation insulation is fully sealed at any joints and/or at lead-in nipples, silencers, roof cowls or similar.
- The air must be routed to the outdoor air duct through an outer wall grille in the facade. The outer wall grille must be installed so that it is protected from the weather and must be designed so that no rainwater and/or snow can penetrate the facade or follow the air into the duct.
- When positioning the outdoor air and extract air hood/grille, bear in mind that the two air flows must not short circuit to prevent the extract air from being drawn into ERS 30 again.
- A duct in a masonry chimney stack must not be used for extract air or outdoor air.

EXHAUST AIR DUCT /KITCHEN FAN

Exhaust air duct (kitchen fan) must not be connected to ERS 30.

To prevent food vapour being transferred to ERS 30 the distance between the kitchen fan and the exhaust air device must be considered. The distance should not be less than 1.5 m, but this can vary between different installations.

Always use a kitchen fan when cooking.

Ventilation flow

Connect ERS 30 so that all the exhaust air, except kitchen duct air (kitchen fan), passes through the heat exchanger (EP26) in the product.

The ventilation flow must comply with the applicable national standards.

The supply air flow must be lower than the exhaust air flow to prevent over pressure in the house.

Adjusting ventilation

To obtain the necessary air exchange in every room of the house, the exhaust air valve and the supply air inlet as well as the fans in the ventilation heat exchanger must be correctly positioned and adjusted.

Immediately after installation adjust the ventilation so that it is set according to the projected value of the house.


Incorrect adjustment of the ventilation may lead to reduced installation efficiency and thus poorer operating economy, and may cause moisture damage in the building

Preheating outdoor air

If the extract air temperature is too low, the supply air fan slows down to prevent the condensation water in the heat exchanger from freezing.

To prevent this from happening too often in areas with colder climates, an electrical air heater EAH 20 (EB17) and an outdoor air sensor (BT23) should be installed in the outdoor air duct as illustrated. EAH 20 heats the incoming outdoor air so that the extract air temperature does not fall to the stated level.

See the Installer Manual for EAH 20 for more information.

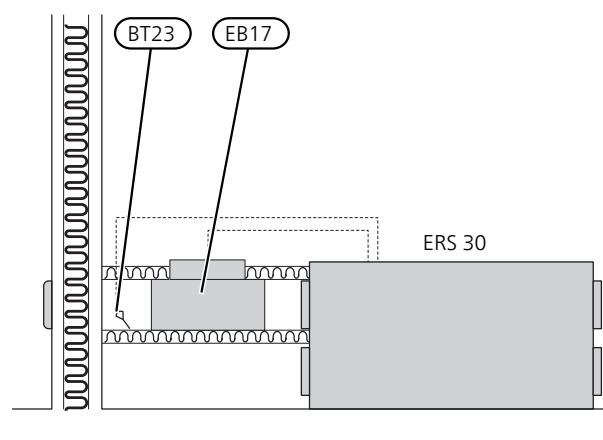

5 Electrical connection



NOTE

All electrical connections must be carried out by an authorised electrician.

Electrical installation and wiring must be carried out in accordance with the stipulations in force.

ERS 30 must not be powered during installation.



NOTE

If the supply cable is damaged, only NIBE, its service representative or similar authorised person may replace it to prevent any danger and damage.



NOTE


To prevent interference, sensor cables to external connections must not be laid close to high voltage cables.

For electrical wiring diagram, see page 23.

Connecting to main product


If several accessories are to be connected, or are already connected, the following cards must be connected in series with the previous card.

Use cable type LiYY, EKKX or similar.

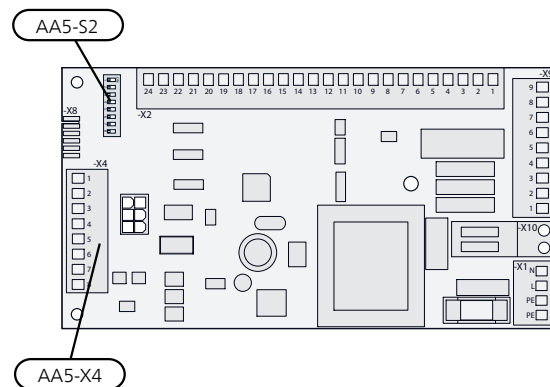


S-SERIES

The communication cable (W102) in ERS 30 must be connected to the main product.

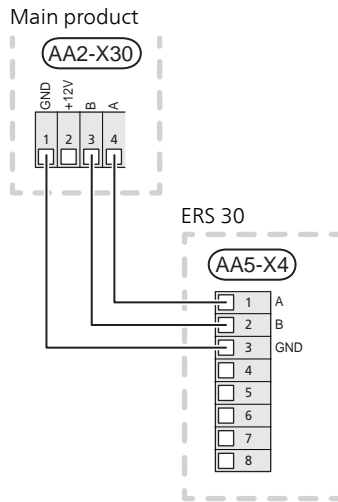


If more ERS 30 are to be installed, they must be connected in series as illustrated:

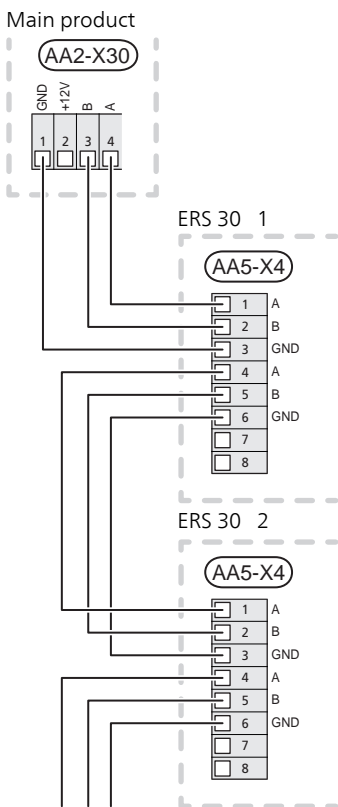


F-SERIES

The communication cable (W102) in ERS 30 must be connected to the main product.

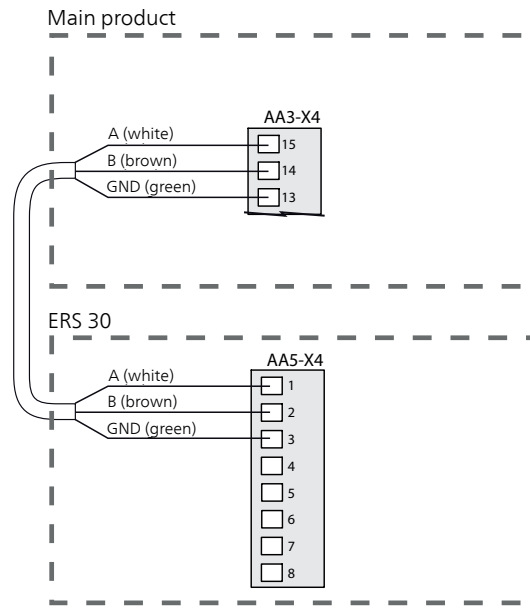


If more accessories are installed, they must be connected in series, as illustrated:

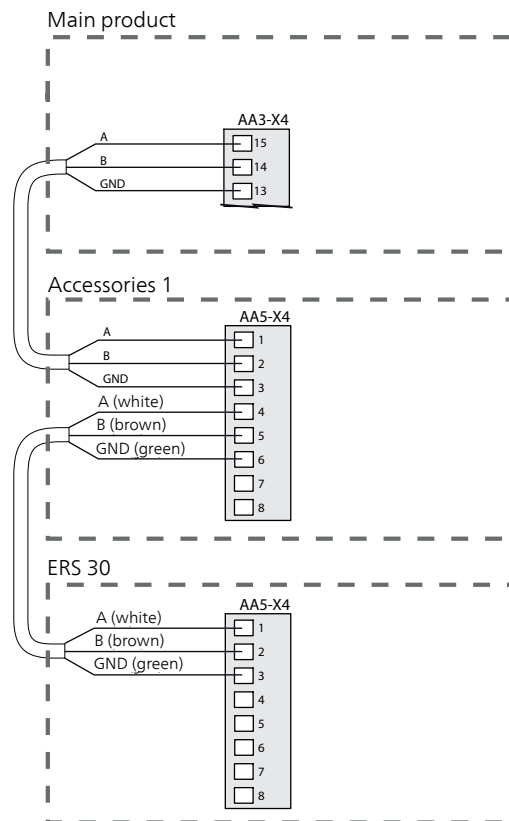


TIP

See the main product's Installer Manual for the placing of the input board.


The DIP switch (AA5-S2) must be set as follows.

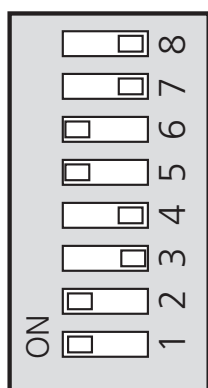


ERS 30 no. 1

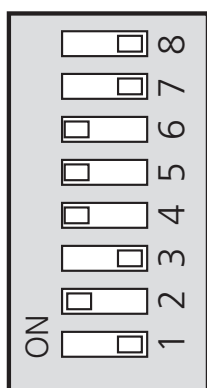

ERS 30 no. 2

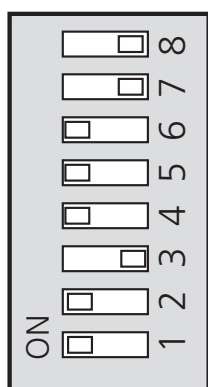

ERS 30 no. 3

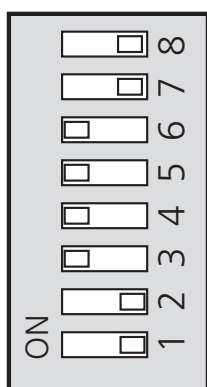

ERS 30 no. 4

Outside air sensor

When installing with an electrical preheater (EAH 20), disconnect the outdoor air sensor (BT23) in ERS 30.

The enclosed outdoor air sensor EAH 20 is placed in the outdoor air duct and connected to the accessory board (AA5) according to the Installer Manual for EAH 20.

6 Commissioning and adjusting

Preparations

- Check the miniature circuit-breaker (FA1) in the main product. It may have tripped during transportation.
- Check that the air filters are clean, they can become dirty after installation.

Filling and venting

- Check that there is water in the water seal, fill if necessary.

Start-up and inspection

SETTING THE VENTILATION

The ventilation must be set according to applicable standards. The supply air flow is adjusted to guarantee a negative pressure. The settings are made in menu 7.1.4 for the S-series and in menu 5.1.5 and 5.1.6 for the F-series.

Even if ventilation is roughly set at installation it is important that a ventilation adjustment is ordered and permitted.



Caution


An incorrectly set ventilation flow can damage the house and may also increase energy consumption.




NOTE

Order a ventilation adjustment to complete the setting.

Ventilation capacity

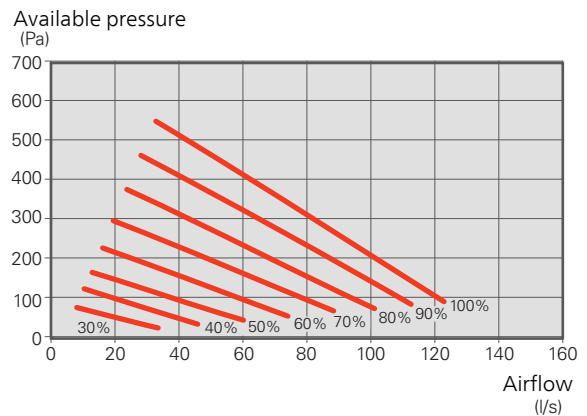


Fan rating¹

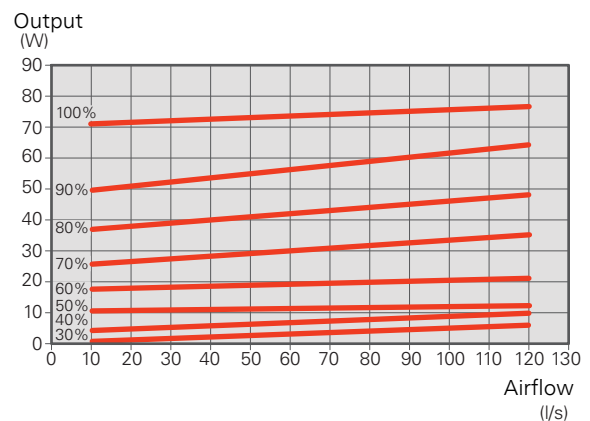

¹The diagram shows the power consumption per fan.

Dry temperature efficiency according to EN 308

Temperature efficiency (%)

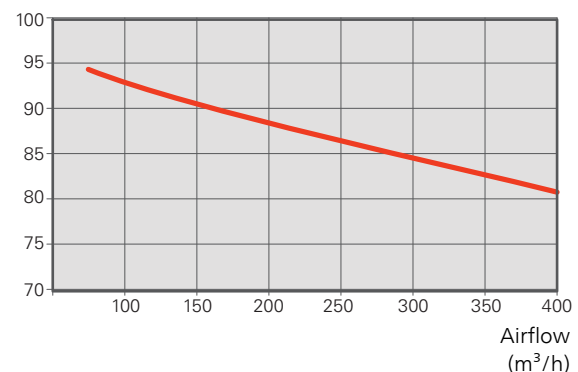

7 Program settings

Program setting of ERS 30 can be performed via the start guide or directly in the menu system in the main product.



Caution

See the documentation for the main product.

lowest extract air temp.: Set the minimum extract air temperature to prevent the heat exchanger freezing.

bypass at excess temperature: If a room sensor is installed, set the excess temperature at which the bypass damper is to open here.

Start guide

The start guide appears at the first start-up after the heat pump installation, but can also be found in menu 7.7 in the S-series and menu 5.7 in the F-Series

Menu system

S-SERIES

If you do not make all settings via the start guide or need to change any of the settings, this can be done in the menu system.

Menu 7.2.1. - Add/remove accessories

Activating/deactivating of accessories.

Select "exhaust/supply air module 1-4".

Menu 7.2.11 - Ventilation heat exchanger (ERS)

lowest extract air temp.

Setting range: 0 – 10 °C

bypass at excess temperature

Setting range: 2 – 10 °C

bypass during heating

Setting range: on/off

cut-out value, exh. air temp.

Setting range: 5 – 30 °C

action level monitor

Setting range: Level monitor/Blocked/Off

Setting range: 1 – 100%

Setting range: 1 – 100%

Setting range: HTS 1 – 4

action level monitor

ERS 30 has built-in level monitor, therefore select Level monitor in the menu. When the input is interrupted, the installation issues an alarm and the fans stop until the input is open.

Menu 1.2.1 - Fan speed

Alternatives: Normal and speed 1-4

The ventilation in the accommodation can be temporarily increased or reduced here.

When you have selected a new speed a clock starts a count down. When the time has counted down the ventilation speed returns to the normal setting.

If necessary, the different return times can be changed in menu 1.2.5.

The fan speed is shown in brackets (in percent) after each speed alternative.

Menu 1.2.2 - Night cooling

Start temperature, exhaust air

Setting range: 20 – 30 °C

Lowest diff., outdoor/exhaust air

Setting range: 3 – 10 °C

Activate night cooling here.

When the temperature in the house is high and the outdoor temperature is lower, a cooling effect can be obtained by forcing the ventilation.

If the temperature difference is greater than the set value for "Min diff outdoor and exhaust air", and the exhaust air temperature is higher than the set value for "Start temperature exhaust air", the ventilation operates at speed 4 until one of these conditions is no longer valid.



Caution

Night cooling is only activated when heating is not permitted, does not apply when "Bypass during heating" is selected (see menu 7.2.11).

Menu 1.2.5 - Fan return time

Select the return time here for the temporary speed change (speed 1-4) of the ventilation in menu 1.2.1.

Return time is the time taken before the ventilation speed returns to normal speed.

Menu 1.2.6 - Filter cleaning interval

Cleaning interval

Setting range: 1 – 24 months

Clean the filter in ERS 30 regularly; how often depends on the amount of dust in the ventilation air.

Set the interval for the reminder to clean the filter in this menu.

The menu shows the time remaining until the next reminder, and you can also reset active reminders.

Menu 7.1.4.1 - Fan speed exhaust air

Normal and Speed 1-4

Setting range: 0 – 100 %

Set the speed for the five different selectable speeds for the fan here.

Menu 7.1.4.2 - Fan speed supply air

Normal and Speed 1-4

Setting range: 0 – 100%

Set the speed for the five different selectable speeds for the fan here.

Menu 6.2 - Scheduling

In this menu, you schedule repeated changes of ventilation.

You can also schedule settings for certain installed accessories.

If a room sensor is installed and activated, the desired room temperature (°C) is set during the time period.

If a room sensor is not activated, the desired offset of the heating curve is set. One step is usually enough to change the room temperature by one degree, but in some cases several steps may be required.



Caution

A schedule repeats according to the selected setting (e.g. every Monday) until you go into the menu and switch it off.

Menu 7.4 - Selectable in/outputs

Select here whether you want to activate fan speed for the relevant AUX input.

F-SERIES

If you do not make all settings via the start guide or need to change any of the settings, this can be done in the menu system.

Menu 5.2.4 -system settings

Activating/deactivating of accessories.

Activate: "exhaust/supply air module".

Menu 5.3.12 - exhaust/supply air module

Settings specific to ERS 30.

"Lowest extract air temp.": Set the minimum extract air temperature to prevent the heat exchanger freezing. The supply air fan speed reduces if the extract air temperature at (BT21) is lower than the set value.

"Bypass at excess temperature": If a room sensor is installed, set the over-temperature at which the bypass damper (QN37) must open here.

"Bypass during heating": Set here if you want to allow the bypass damper (QN37) to open during heat production as well.

"Months btwn filter alarms": Set how often the filter alarm must be displayed.

"Action level monitor"

ERS 30 has built-in level monitor, therefore select Level monitor in the menu. When the input is interrupted, the installation issues an alarm and the fans stop until the input is open.



TIP

When ERS 30 is activated, the other ventilation menus will also light up.

8 Disturbances in comfort

In most cases, the main product notes a malfunction (a malfunction can lead to disturbance in comfort) and indicates this with alarms and shows action instructions in the display.

Troubleshooting

If the operational interference is not shown in the display the following tips can be used:

BASIC ACTIONS

Start by checking the following possible fault sources:

- That the main product is running and that the supply cable to ERS 30 is connected.
- Group and main fuses of the accommodation.
- The property's earth circuit breaker.
- The main product's fuses/temperature limiter.

HIGH OR LOW ROOM TEMPERATURE

- See Installer Manual for the main product.

LOW OR A LACK OF VENTILATION

- Level monitor (BL2) tripped.
 - Checking the condensation water drain and water seal.
- Filter blocked.
 - Clean or replace the filter.
- The ventilation is not adjusted.
 - Order/implement ventilation adjustment.
- Closed, too much choke or blocked ventilation device.
 - Check and clean the exhaust air devices.
- Fan speed in reduced mode.
 - Go to the main product's menu 1.2.1 for the S-series and 1.2 for the F-Series and select "normal".
- External switch for changing the fan speed activated.
 - Check any external switches.
- Fan running slow because of low incoming outdoor air temperature.



- Check the function and settings for the electrical air heater (EAH 20) if installed.

HIGH OR DISTRACTING VENTILATION


- Filter blocked.
 - Clean or replace the filter.
- The ventilation is not adjusted.
 - Order/implement ventilation adjustment.
- Closed, too much choke or blocked ventilation device.
 - Check and clean the exhaust air devices.
- Fan speed in forced mode.
 - Go to the main product's menu 1.2.1 for the S-series and 1.2 for the F-Series and select "normal".
- External switch for changing the fan speed activated.
 - Check any external switches.
- Silencers not correctly installed.
 - Check the silencers.

10 Technical data

Dimensions ERS 30

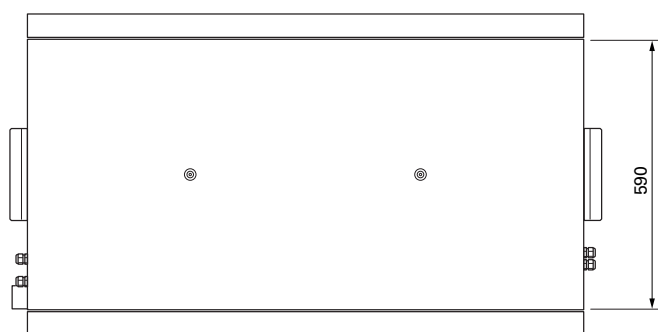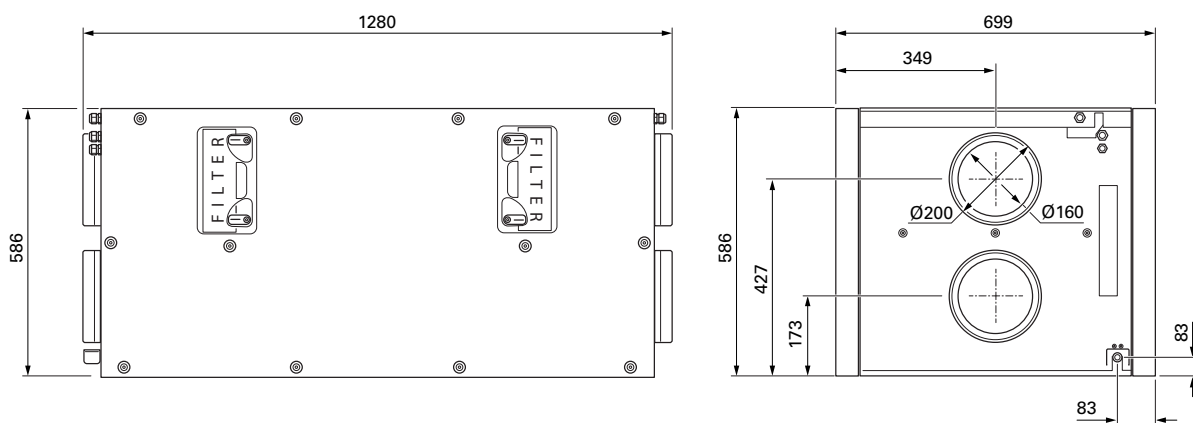

EAH 20

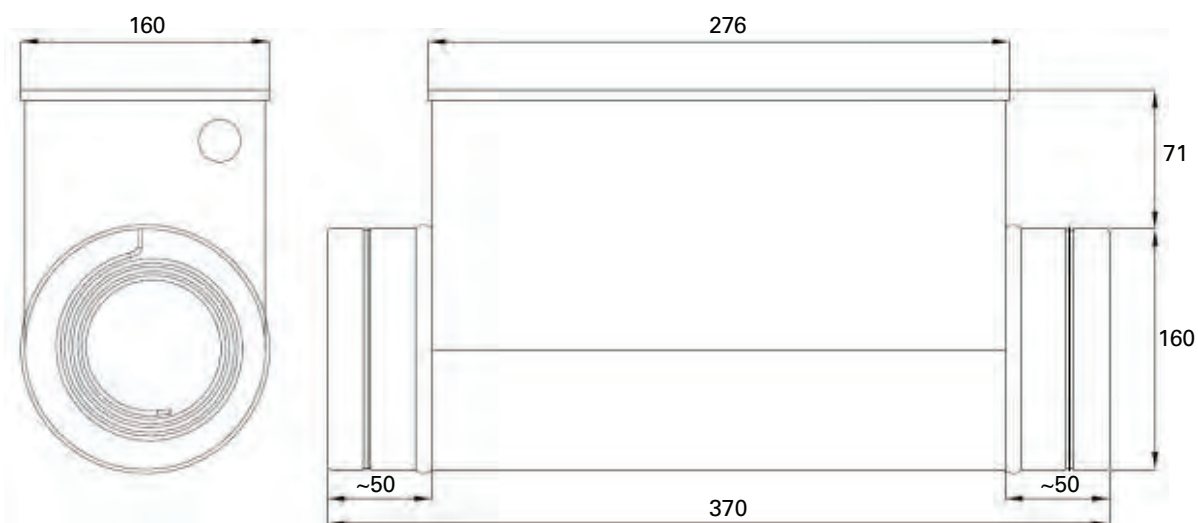

Technical

specifications

Type		ERS 30
<i>Electrical data</i>		
Supply voltage	V	230 V ~ 50Hz
Fuse	A	10
Driving power fan	W	2 x 85
Enclosure class		IP X1
<i>Ventilation</i>		
Filter type, exhaust air filter		Grov
Filter type, supply air filter		ePM1 55%
<i>Sound pressure levels</i>		
Sound pressure level ($L_{P(A)}$) ¹	dB(A)	47
<i>Pipe connections</i>		
Ventilation Ø	mm	160
Condensation water drain	mm	15
<i>Dimensions and weight</i>		
Working temperature range for incoming air	C	Min. -25 °C, Max. 40 °C
Efficiency class ²		A
Length, supply cable	m	2.4
Length, control cable	m	2.0
Width	mm	1,280
Height	mm	586
Depth	mm	699
Weight	kg	56
Part no.		066 165


¹ 335 m³/h (93 l/s) at 50 Pa

² Scale for efficiency class: A+ to G.

Energy labelling

Supplier		NIBE
Model		ERS 30-400
Specific energy consumption (SEC)	kWh/(m ² year)	Average: -37.8 Cold: -74.5 Warm: -14.2
Energy efficiency class		A
Declared typology		RVU, Bidirectional
Type of drive		Variable speed drive
Type of heat recovery system		Recuperative
Thermal efficiency of heat recovery		83
Maximum air flow rate	m ³ /h	480
Electric power input of the fan drive at maximum flow rate	W	164
Sound power level (LWA)	dB	47
Reference flow rate	m ³ /s	0.093
Reference pressure difference	Pa	50
Specific power input (SPI)	W/m ³ /h	0.199
Control factor and control typology		Clock control (0.95)
External leakage rates	%	Internal: 1.4 External: 1.64
Information about filter warning		See user manual.
Information about supply/exhaust grilles in the facade		See section General ventilation connections on page 11.
Information about pre-/disassembly		See section Recovery on page 5. This installer manual can also be accessed at nibe.eu.
The annual electricity consumption	kWh/year	270
Annual heating saved, kWh primary energy per year	kWh prim/year	Average: 4,392 Cold: 8,592 Warm: 1,986

ELECTRICAL CIRCUIT DIAGRAM

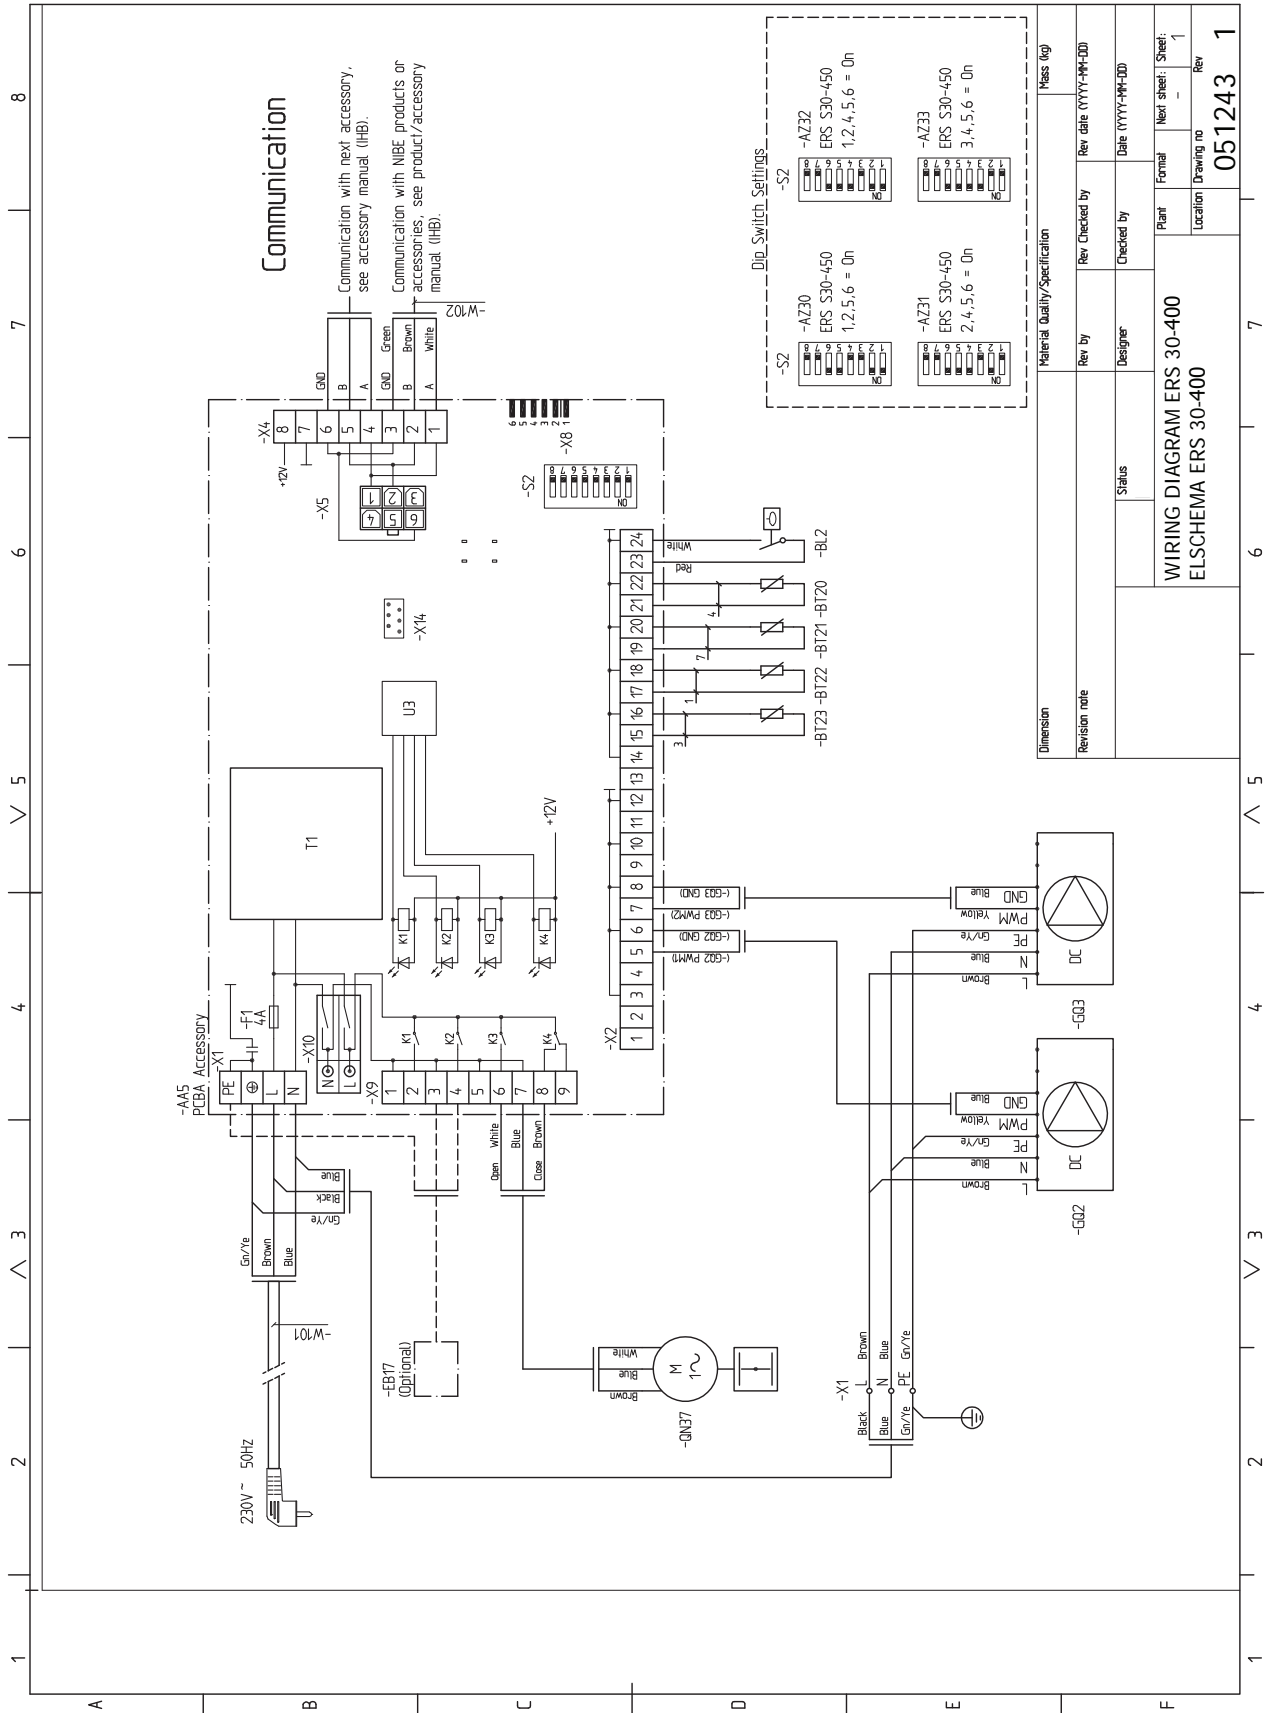

WIRING DIAGRAM ERS 30-400
ELSCHEMA ERS 30-400

051243 1

Item register

A

Accessories, 20
Assembly, 7

C

Commissioning and adjusting, 15
 Filling and venting, 15
 Preparations, 15
Condensation outlet, 10
 Cleaning, 10

D

Disturbances in comfort, 19
 Troubleshooting, 19

E

Electrical circuit diagram, 23
Electrical connection, 12
 Connecting to main product, 12
 DIP switch, 14
 Outside air sensor, 14
Energy labelling, 22
Exhaust air duct, 11

F

Filling and venting, 15

G

General ventilation, 11
 Adjustment, 11
 Preheating outdoor air, 11
 Ventilation flows, 11

I

Important information, 4
 Recycling, 5
Inspection of the installation, 6

M

Marking, 4
Menu system, 16

P

Pipe and ventilation connections
 Exhaust air duct, 11
Program settings, 16

R

Recycling, 5
Removing the covers, 7

S

Safety information
 Inspection of the installation, 6
 Marking, 4
 Symbols, 4
Serial number, 4
Start guide, 16
Start-up and inspection
 Setting the ventilation, 15
Symbols, 4

T

Technical data
 Electrical circuit diagram, 23
The design of the exhaust air module, 8
 List of components, 8
Transport and storage, 7
Troubleshooting, 19

Contact information

AUSTRIA

KNV Energietechnik GmbH
Gahberggasse 11, 4861 Schörfling
Tel: +43 (0)7662 8963-0
mail@knv.at
knv.at

CZECH REPUBLIC

Družstevní závody Dražice - strojírna
s.r.o.
Dražice 69, 29471 Benátky n. Jiz.
Tel: +420 326 373 801
nibe@nibe.cz
nibe.cz

DENMARK

Vølund Varmeteknik A/S
Industrivej Nord 7B, 7400 Herning
Tel: +45 97 17 20 33
info@volundvt.dk
volundvt.dk

FINLAND

NIBE Energy Systems Oy
Juurakkotie 3, 01510 Vantaa
Tel: +358 (0)9 274 6970
info@nibe.fi
nibe.fi

FRANCE

NIBE Energy Systems France SAS
Zone industrielle RD 28
Rue du Pou du Ciel, 01600 Reyrieux
Tél: 04 74 00 92 92
info@nibe.fr
nibe.fr

GERMANY

NIBE Systemtechnik GmbH
Am Reiherpfahl 3, 29223 Celle
Tel: +49 (0)5141 75 46 -0
info@nibe.de
nibe.de

GREAT BRITAIN

NIBE Energy Systems Ltd
3C Broom Business Park,
Bridge Way, S41 9QG Chesterfield
Tel: +44 (0)845 095 1200
info@nibe.co.uk
nibe.co.uk

NETHERLANDS

NIBE Energietechnik B.V.
Energieweg 31, 4906 CG Oosterhout
Tel: +31 (0)168 47 77 22
info@nibenl.nl
nibenl.nl

NORWAY

ABK AS
Brobekkveien 80, 0582 Oslo
Tel: (+47) 23 17 05 20
post@abkklima.no
nibe.no

POLAND

NIBE-BIAWAR Sp. z o.o.
Al. Jana Pawla II 57, 15-703 Białystok
Tel: +48 (0)85 66 28 490
biawar.com.pl

RUSSIA

EVAN
bld. 8, Yuliusa Fuchika str.
603024 Nizhny Novgorod
Tel: +7 831 419 57 06
kuzmin@evan.ru
nibe-evan.ru

SWEDEN

NIBE Energy Systems
Box 14
Hannabadsvägen 5, 285 21 Markaryd
Tel: +46 (0)433-27 3000
info@nibe.se
nibe.se

SWITZERLAND

NIBE Wärmetechnik c/o ait Schweiz
AG
Industriepark, CH-6246 Altishofen
Tel. +41 (0)58 252 21 00
info@nibe.ch
nibe.ch

For countries not mentioned in this list, contact NIBE Sweden or check nibe.eu for more information.

NIBE Energy Systems
Hannabadsvägen 5
Box 14
SE-285 21 Markaryd
info@nibe.se
nibe.eu

IHB EN 1941-1 531410

This manual is a publication from NIBE Energy Systems. All product illustrations, facts and data are based on the available information at the time of the publication's approval. NIBE Energy Systems makes reservations for any factual or printing errors in this manual.

©2019 NIBE ENERGY SYSTEMS

